

---

# nexus2tv

dual Digital Tuner Recorder HD Network Media Player



# Table of Contents

<b>1. Introduction</b>	<b>3</b>
1.1 Preface	4
1.2 Packing List	4
1.3 Cautions	4
1.4 Connection	6
1.5 Power On / Off	11
1.6 Menu Language	11
<b>2. About the Player</b>	<b>11</b>
2.1 Remote Control	11
2.2 Front Panel	15
2.3 Rear Panel	15
<b>3. Setup Menu</b>	<b>16</b>
3.1 Changing TV Settings	17
3.2 Changing Audio Settings	20
3.3 Changing Video Settings	21
3.4 Changing Record Settings	22
3.5 Changing Network Settings	24
3.6 Changing System Settings	29
3.7 Miscellaneous	34
<b>4. Browser Menu</b>	<b>35</b>
4.1 Browsing All	36
4.2 Browsing Music	37
4.3 Browsing Photos	38
4.4 Browsing Movies	39
4.5 A/V Streaming via Network	40
4.6 A/V Streaming via UPnP-server	43
4.7 Renaming / Deleting Files	46
<b>5. File Copy Menu</b>	<b>47</b>
<b>6. Selecting Time REC</b>	<b>48</b>
6.1 Watching TV	48
<b>7. Timer Record Menu</b>	<b>54</b>
7.1 Creating a New Schedule	54
7.2 Editing Schedules	56
7.3 Deleting Schedules	56
7.4 Viewing Schedule Status	57
7.5 Viewing Recording History	58
7.6 The REC List	59
<b>8. Web Server &amp; BitTorrent</b>	<b>59</b>
8.1 Web Server (unicgi)	59
8.2 Account Management	60
8.3 Visit Neighbor (samba)	61
8.4 BitTorrent Download (btpd)	61
<b>9. Upgrading the Firmware</b>	<b>63</b>
<b>10. Appendixes</b>	<b>64</b>
10.1 Specifications	64
10.2 Frequently Asked Questions	66
10.3 Copyrights and Trademarks	69
10.4 Warranty	69

# 1. Introduction

## 1.1 Preface

Thank you very much for purchasing the product. We hope you will enjoy using it as a great home entertainment partner. This player has the following functionality.

### A/V Output

- HDMI V1.3 for high-definition video and digital audio
- Composite & component video and stereo audio for analog audio-visual connection
- S/PDIF coaxial & optical interface for high-fidelity digital audio
- Adjustable video output resolution (NTSC, PAL, 480p, 576p, 720p, 1080i, 1080p)

### Multimedia Playback

- Supports major audio, video and image file formats (1080p HD video decoding)
- Movie format: AVI/MKV/TS/TP/TRP/M2TS/MPG/MP4/M4V/MOV/VOB/ISO/IFO/DAT/WMV/ASF/RM/RMVB/FLV
- Music format: MP3/OGG/WMA/WAV/AAC/FLAC
- Photo format: HD JPEG/BMP/GIF/TIF/PNG
- Photo slide show with background music

### Network Feature

- A/V streaming/transmission via Ethernet (10M/100M) & Wi-Fi (802.11b/g/n, optional)
- File sharing via Samba server
- A/V streaming via UPnP Media Server
- BitTorrent download (controlled and managed via web server)
- Digital Radio (SHOUTcast)

### File Copy

- Supports copying & moving files among Card, USB, HDD, and Network

### USB 2.0 Support

- USB DEVICE port (for computer connection)
- USB HOST port x 2 (for USB storage devices)

**Note:** All the information contained in this manual was correct at the time of publication. However, as our engineers are always updating and improving the product, your device's software may have a slightly different appearance or modified functionality than presented in this manual.

## 1.2 Packing List

Part	Quantity
Player	1
A/V cable	2
USB cable	1
Remote Control	1
Remote Control Battery	2
AC/DC adaptor	1
AC/DC adaptor Power Cord	1
User Manual (printed)	1
Driver CD (with User Manual)	1
DVB-T antenna	1 (optional)
Y/Pb/Pr cable	1 (optional)
HDMI cable	1 (optional)
802.11b/g/n Wireless LAN USB adapter	1 (optional)

**Note:** The actual contents in the package might be different from the packing list in this manual.

## 1.3 Cautions

This player's design and manufacture has your safety in mind. In order to safely and effectively use this player, please read the following before usage.

### 1.3.1 Usage Cautions

User should not modify this player. If commercial hard disk is being used, the environmental temperature should be within +5°C ~ +35°C.

### 1.3.2 Power

The player's power voltage: DC 12V 3A.

When using this player, please connect the supplied AC adapter or AC adapter cable to the player's power jack. When placing the adapter cable, make sure it can not get damaged or be subject to pressure. To reduce the risk of electric shock, unplug the adapter first before cleaning it. Never connect the adapter to the player in a humid or dusty area. Do not replace the adapter or cable's wire or connector.

### 1.3.3 Radio Interference

- If not properly shielded, almost all electronic devices will get radio interference. Under some conditions, your player might get interference.
- The design of this player has followed the FCC/CE standard, and has followed the following rules:
  - (1) This player may not cause harmful interference;
  - (2) This player could accept some interference received including interference that may cause undesired operation.

### **1.3.4 Repair**

If the player has a problem, you should take it to an appointed repair center and let the specialists do the repair, never repair the player yourself, you might damage the player or endanger yourself or your data.

### **1.3.5 Disposing of the Player**

When you dispose of the player, be sure to dispose it appropriately. Some countries may regulate disposal of electrical device, please consult with your local authority.

### **1.3.6 Hard Disk Cautions**

The player uses an internal hard disk for data storage, in normal case, format or repair is not required. You should carefully read the < Frequently Asked Questions > chapter, and check our website for latest information before formatting the hard disk.

- ✧ Physical impact may create bad sector in the hard disk, you can use CHKDSK to fix the problem.
- ✧ All data stored in the player may be lost due to physical impact, electrical shock, power lost, HDD format etc. Please backup your data.
- ✧ It is suggested to do defragment after a long period of usage.
- ✧ Regularly backup the data in the hard disk so that it can be recovered in the event of data corruption or loss. Our company takes no responsibility for loss of data stored on the hard disk.

### **1.3.7 Others**


When using this player, please do not let the player come into contact with water or other liquid, if water is accidentally spilled on the player, please use a dry cloth to absorb the spillage. Electronic products are vulnerable, when using please avoid shaking or hitting the player, and do not press the buttons too hard.

- ✧ Do not let the player come into contact with water or other liquid.
- ✧ Do not disassemble the player, repair the player or change the design of the player, any damage done will not be included in the repair policy.
- ✧ Do not press the buttons of the player too hard.
- ✧ Avoid hitting the player with hard object, avoid shaking the player, and stay away from magnetic fields.
- ✧ During electrostatic discharge and the strong electromagnetic field, the product will malfunction, then unplug the power cable and the product will return to normal performance next time it is powered on.

## 1.4 Connection


### 1.4.1 Connecting the Power Supply

- (1) Follow the picture and connect the AC adaptor to the player's DC IN jack;
- (2) Follow the picture and plug in the AC adaptor to the power outlet.

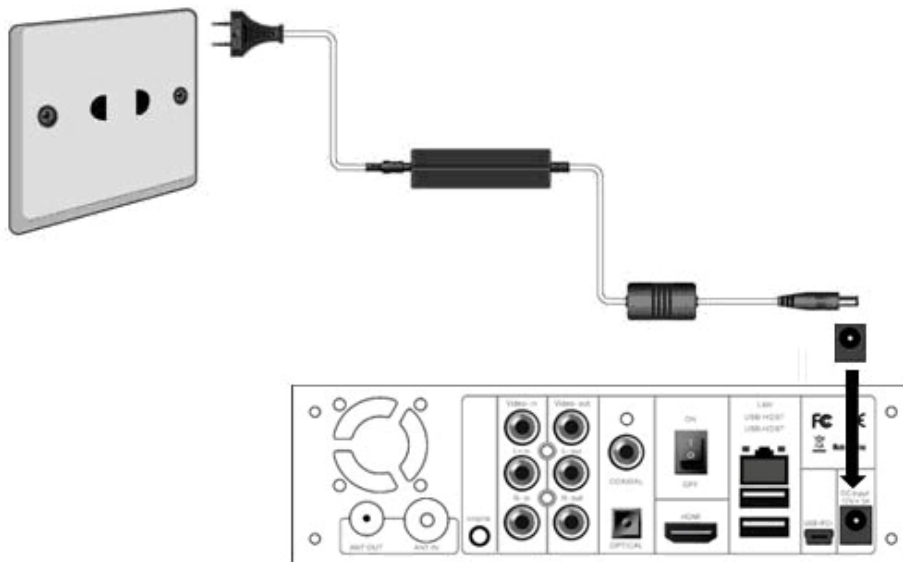


### 1.4.2 Connecting to a PC

- (1) Make sure the player is powered on;
- (2) Plug in the squarish connector of the USB cable to this player's USB DEVICE port;
- (3) Plug in the rectangular connector of the USB cable to computer.

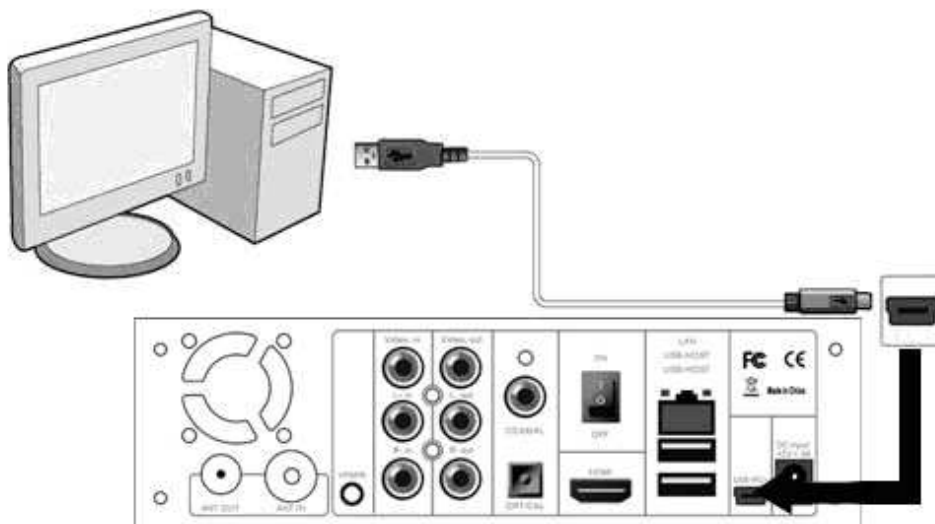


In this way, you can manage content on the built-in HDD of the player on your local PC.

 - (1) Make sure the player is powered on;
- (2) Plug in the USB stick or USB HDD etc. to the USB HOST port of this player.



Memory card can be used by inserting to the card slot

 
- (1) Follow the picture to insert the memory card to the card slot properly;
- (2) Insert the card by following the arrow pointer in the picture.



## 1.4.5 Connecting to a TV

### 1.4.5.1 A/V OUT

- (1) Follow the picture and plug in the 3 color connector to the player's A/V OUT jack;
  - (2) Follow the picture and plug in the 3 color connector to the TV's A/V IN jack.
- In this way, you can enjoy the content in the player on TV or other display devices.

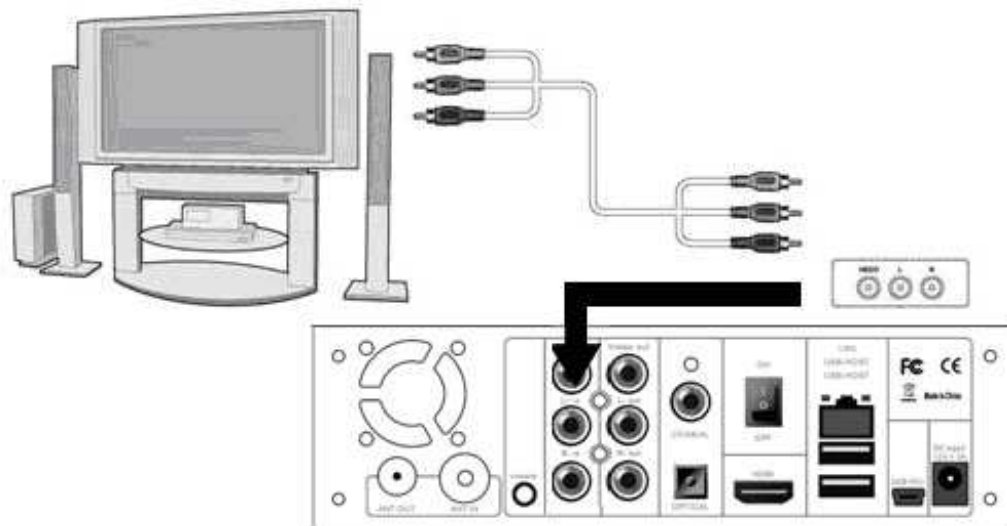


### 1.4.5.2 Y/Pb/Pr Component OUT

- (1) Follow the picture and plug in the 3 color connector to the player's Y/Pb/Pr jack;
- (2) Follow the picture and plug in the 3 color connector to the TV's Y/Pb/Pr jack.

Audio Connection while using Y/Pb/Pr Video out:

First method: use the audio output from the A/V OUT jack;

Second method: use the audio output from the S/PDIF Coaxial or Optical jack.

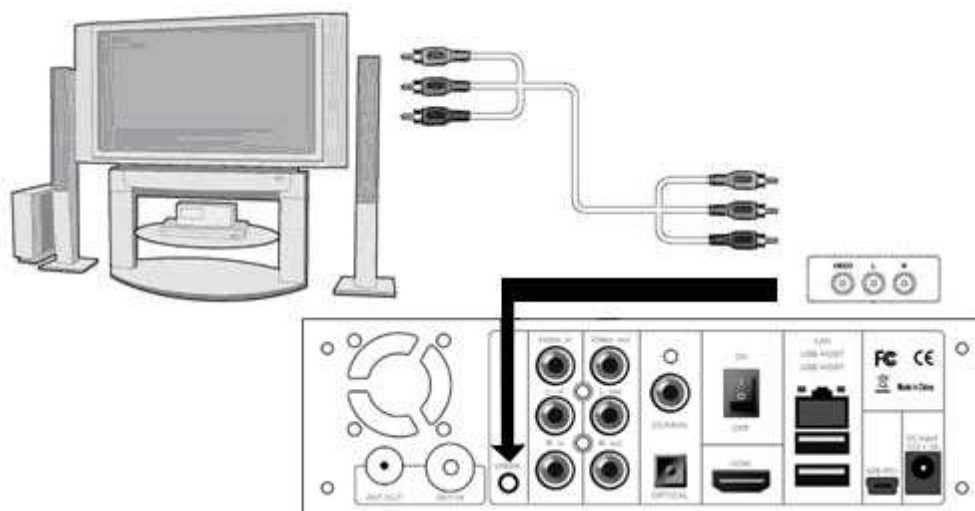


In this way, you can also enjoy videos, music, and photos in the player on TV.



### 1.4.5.3 HDMI OUT

- (1) Follow the picture and plug one connector on your HDMI cable to the player's HDMI jack;
- (2) Follow the picture and plug the other connector on your HDMI cable to the TV's HDMI jack.

**Note:** The HDMI cable is an optional accessory sold separately.

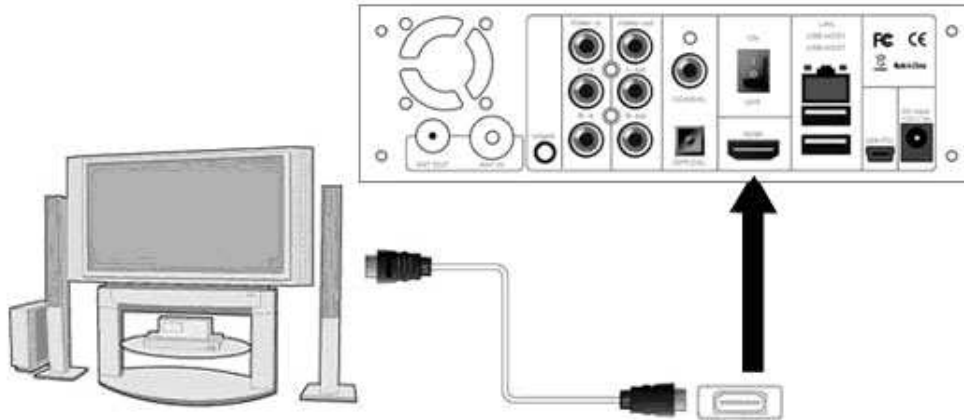


In this way, you can have the highest quality video and audio via a single cable.

### 1.4.6 Connecting to a Digital Amplifier

- (1) Follow the picture and plug in the RCA connector on your coaxial cable to the player's S/PDIF Coaxial jack. Or if you use optical fiber, please plug in the Toslink connector on your optical fiber to the player's S/PDIF Optical jack;
- (2) Follow the picture and plug in the other connector on your coaxial cable or optical fiber to the digital audio device (digital amplifier or decoder).

**Note:** Optical fiber and coaxial cable are not supplied.

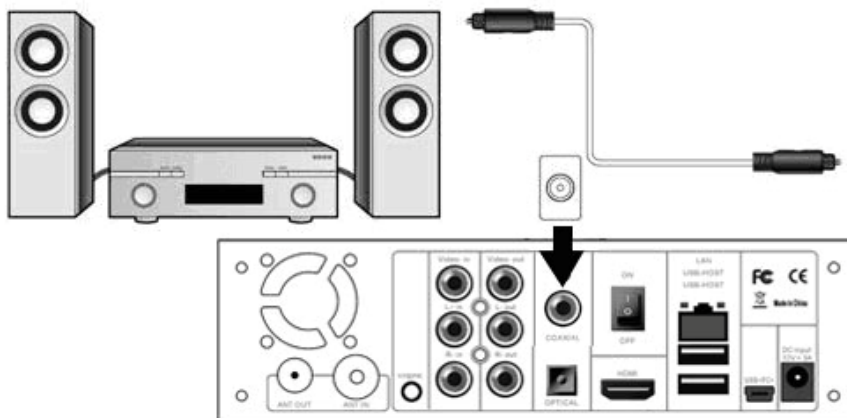


In this way, you can enjoy powerful Dolby Digital, DTS, or MPEG sound. (Please refer to '**3.2 Changing Audio Settings**' for configuration)

### 1.4.7 Connecting to a LAN

To connect to a LAN (Local Area Network) you require a cat5, cat5e or cat6 network cable (not supplied).


- (1) Connect one of the crystal plugs on the cable to the player's RJ45 LAN socket;
- (2) Connect the other crystal plug on the cable to a RJ45 LAN port on your router, switch, or hub devices.

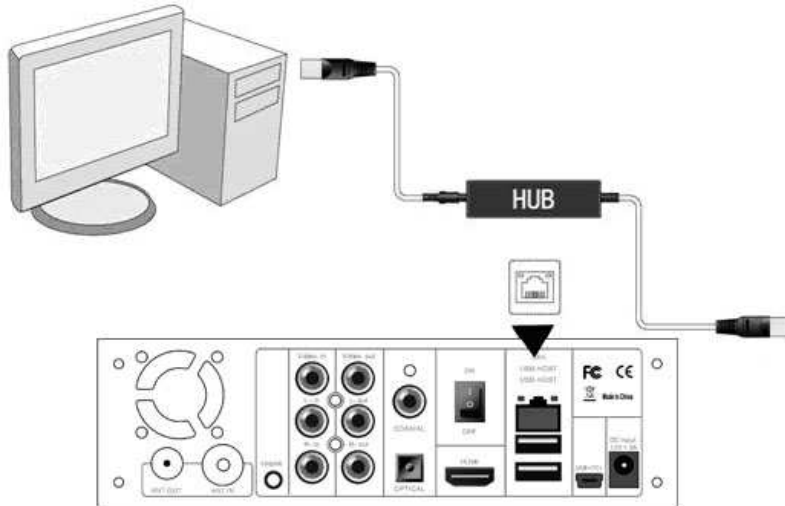

### 1.4.8 Connecting to a WLAN

- (1) Make sure the player is powered on;
- (2) Plug the Wireless LAN USB Adapter (i.e. Wi-Fi USB Dongle) to the USB HOST port of the player.

**Note:** The Wi-Fi Dongle is an optional accessory sold separately. (Please refer to '**3.5 Changing Network Settings**' for more details about wireless setup)

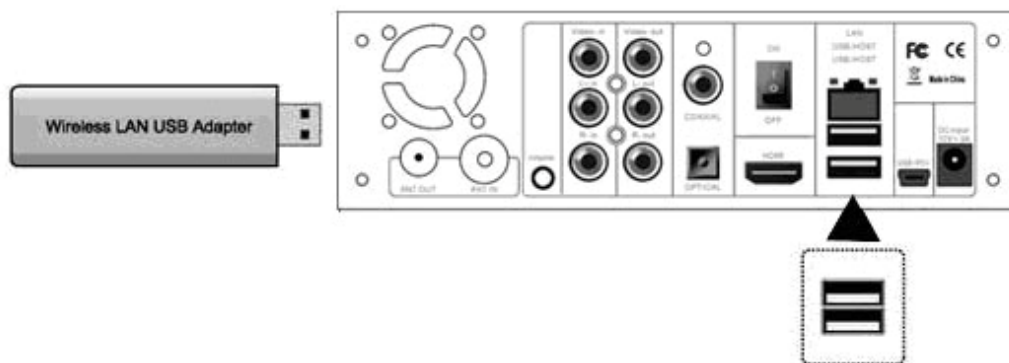

## 1.5 Power On / Off

### Power On


After connecting the DC IN jack and press the power button on the front panel, the player will soon enter the home screen, and the power indicator will turn blue.

### Power Off

Press the power button on the front panel, the player will soon enter standby mode, and the power indicator will turn red. Then unplug the power cord to cut off the power supply.

## 1.6 Menu Language

The system language of this player can be set to English or other languages. Change the language you wish in the setup menu, the selected language will take effect immediately.

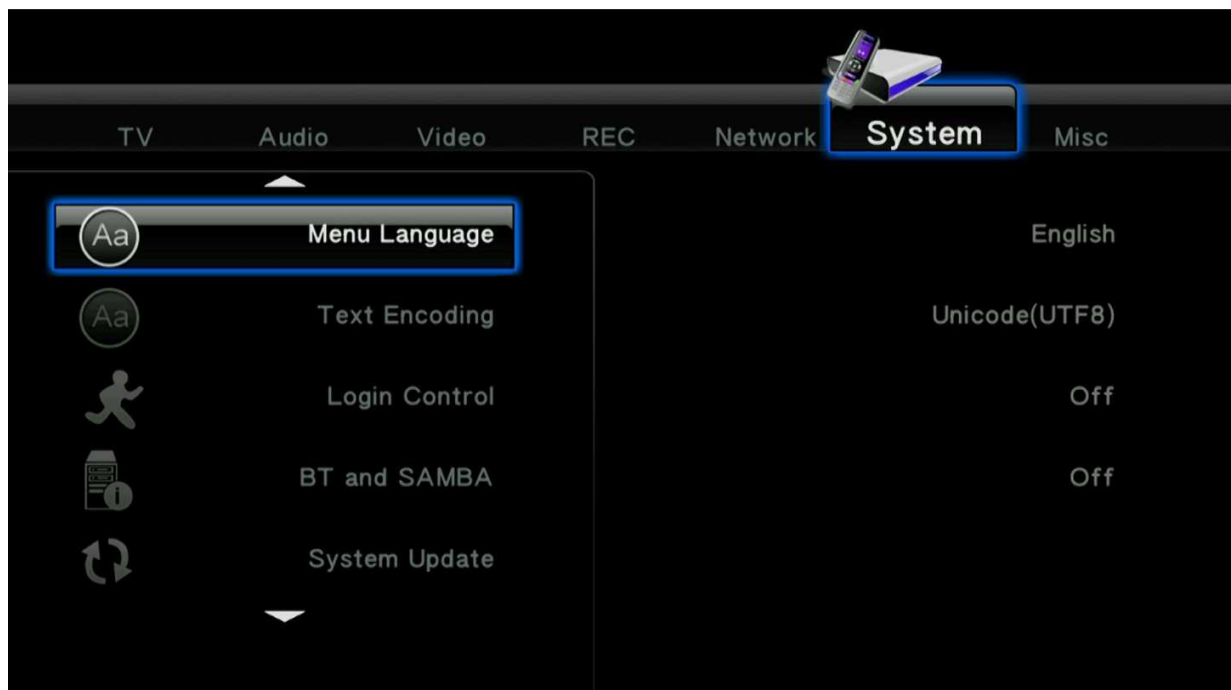

## 2. About the Player

### 2.1 Remote Control


 

All procedures in this manual can be carried out using the remote control buttons. See the following for details on each button and its function:

**Remark: EPG, TELETEXT ,SOURCE button only available in DTV model**




No.	Button	Function
1	<b>POWER</b>	Press to POWER on or off the AVHDD recorder.
2	<b>EPG</b>	Press to enter the Electronic Program Guide which displays an on-screen list of programs for the coming week when watching Digital Terrestrial TV.
3	<b>CONFIRM</b>	Press to confirm and add the selects to the playlist.
4	<b>TELETEXT</b>	Press to open Teletext OSD if it is available in the broadcasted stream of Digital Terrestrial TV.
5	<b>SELECT</b>	Press to select files in browser and file copy menu.
6	<b>TITLE</b>	Press to show HDD or DVD Title List.
7	<b>OPTION</b>	Press to select option bar.
8	<b>EJECT</b>	Press to eject a DVD from the DVD-ROM drive.

9	<b>MENU</b>	Press in the browser menu to rename and delete files.  Press in My_Shortcuts in NET of the browser menu to add shortcuts for network access.
10	<b>Numeric buttons</b>	Press to enter numeric input when changing settings.
11	<b>ZOOM</b>	ressPress to zoom in/out when playing back photos or Video programs.  Photo zoom levels:2X,4X,8X,16X;
12	<b>GOTO</b>	Press to jump to a specific point on a title. Specify the point using Title, Chapter and Time.
13	<b>DISPLAY</b>	Press to display current status.  Press during playback and an onscreen display appears, showing track number and time elapsed/remaining.  Press during recording and an onscreen display appears, showing the recording quality setting and time elapsed.
14	<b>GUIDE</b>	Press to view the Guide menu. See <b><i>“The Guide Menu” on page 6</i></b> for more details.
15	<b>Navigational buttons</b>	Press the arrow buttons to select menu options
16	<b>OK</b>	Press the <b>ENTER</b> button to confirm.
17	<b>REC</b>	Press to begin recording or to resume when recording has been paused.  Press repeatedly to set OTR length (30 mins / 60 mins / 90 mins / 120 mins / 180 mins /240 mins/Off).
18	<b>RETURN</b>	Press to return to the previous screen while navigating menus.
19	<b>VOL-</b>	Press to decrease the volume.
20	<b>VOL+</b>	Press to increase the volume.
21	<b>FR</b>	Press to fast rewind the current playback. Press repeatedly to select speeds.
22	<b>FF</b>	Press to fast forward the current playback. Press repeatedly to select speeds.
23	<b>STOP</b>	Press to stop playback.
24	<b>PLAY</b>	Press to begin playback.
25	<b>PREV</b>	Press to go the prev. on a HDD or USB file when playing music.  Press to page up the file list at Browser. When play photo ,the button is enable; play Movie and Mp3 file, the button is disable.


26	<b>NEXT</b>	<p>Press to go the next on a HDD or USB file when playing music.</p> <p>Press to page down the file list at Browser.</p> <p>When play photo ,the button is enable; play Movie and Mp3 file, the button is disable.</p>
27	<b>SLOW</b>	Press to play back in slow motion. Press the <b>PLAY</b> button to resume regular playback.
28	<b>PAUSE/STEP</b>	Press to pause the current playback. Press again to step to the next frame. Press the <b>PLAY</b> button to resume playback.
29	<b>SOURCE</b>	Select the signal source from Video, DTV and Analog TV
30	<b>SUBTITLE</b>	Press to set subtitle options.
31	<b>TIME SHIFT</b>	<p>Press to activate the timeshift function, which allows you to pause live TV and resume the program from the point you left it. While paused, the program is recorded to the HDD, as long as space is available.</p> <p>Press to activate TIME SHIFT function and wait for the PLAY arrow to appear on the screen.</p> <p>Press  and the program is paused.</p> <p>Press  to resume viewing the program.</p> <p>Timeshift mode remains active until you press the  button.</p>
32	<b>REPEAT</b>	Press to set repeat option: One, All, (and Shuffle).
33	<b>SETUP</b>	Press to enter the setup menu.
34	<b>MUTE</b>	PPress to mute audio output, and press again to resume.
35	<b>TV SYSTEM</b>	Press to switch between NTSC, PAL, 480P, 576P, 720P, 1080I, and 1080P.
36	<b>AUDIO</b>	Press to select an audio track.

## 2.2 Front Panel

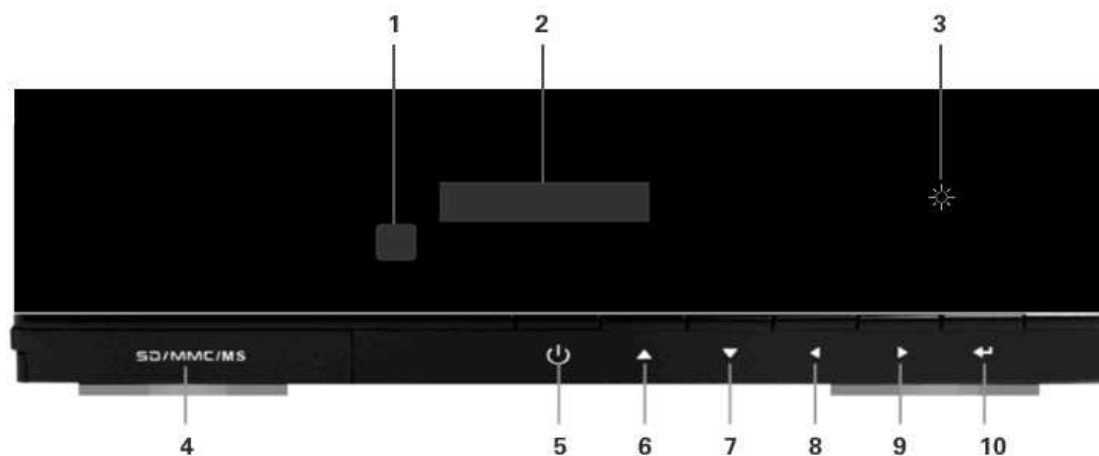

- |                        |                          |
|------------------------|--------------------------|
| 1. IR indicator        | 2. LED SCREEN            |
| 3. Power & Standby LED | 4. SD/MMC/MS/MS PRO SLOT |
| 5. POWER ON/OFF        | 6. UP                    |
| 7. DOWN                | 8. LEFT                  |
| 9. RIGHT               | 10. OK                   |

## 2.3 Rear Panel

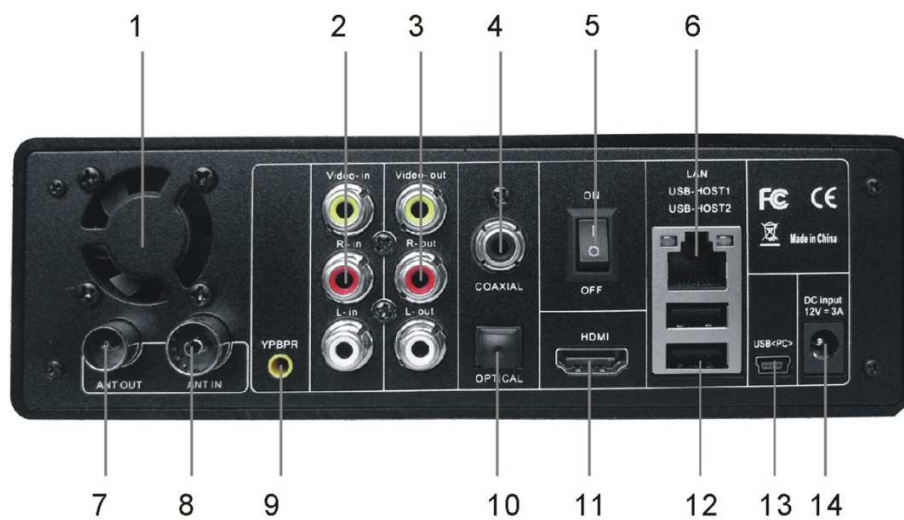

- |   |  |
|---|--|
| 1. FAN                                    | 2. A/V in jack                           |
| 3. A/V OUT jack                           | 4. COAXIAL jack                          |
| 5. POWER SW                               | 6. RJ45 LAN socket                       |
| 7. ANT. OUT (Only available in DTV model) | 8. ANT. IN (Only available in DTV model) |
| 9. Ypbpr jack                             | 10. S/PDIF OPTICAL jack                  |
| 11. HDMI Jack                             | 12. USB HOST*2                           |
| 13. USB DEVICE port (mini5p-Type)         | 14. DC IN jack                           |

### 3. Setup Menu

The Setup menu allows you to personalize and configure the preferences for your player.

To select a Setup option:

- Select the **Setup** icon on the home screen, or press the **SETUP** button on the remote control.






- Use the **LEFT/RIGHT** navigational buttons to select an option, and then press **ENTER**.

There are five Setup options, including **TV**, **Audio**, **Video**, **REC**, **Network**, **System**, and **MISC**. Use the **UP/DOWN** navigational buttons to select a menu. Press **ENTER** to confirm. Press **RETURN** to cancel and display the previous menu screen.




### 3.1 Changing TV Settings

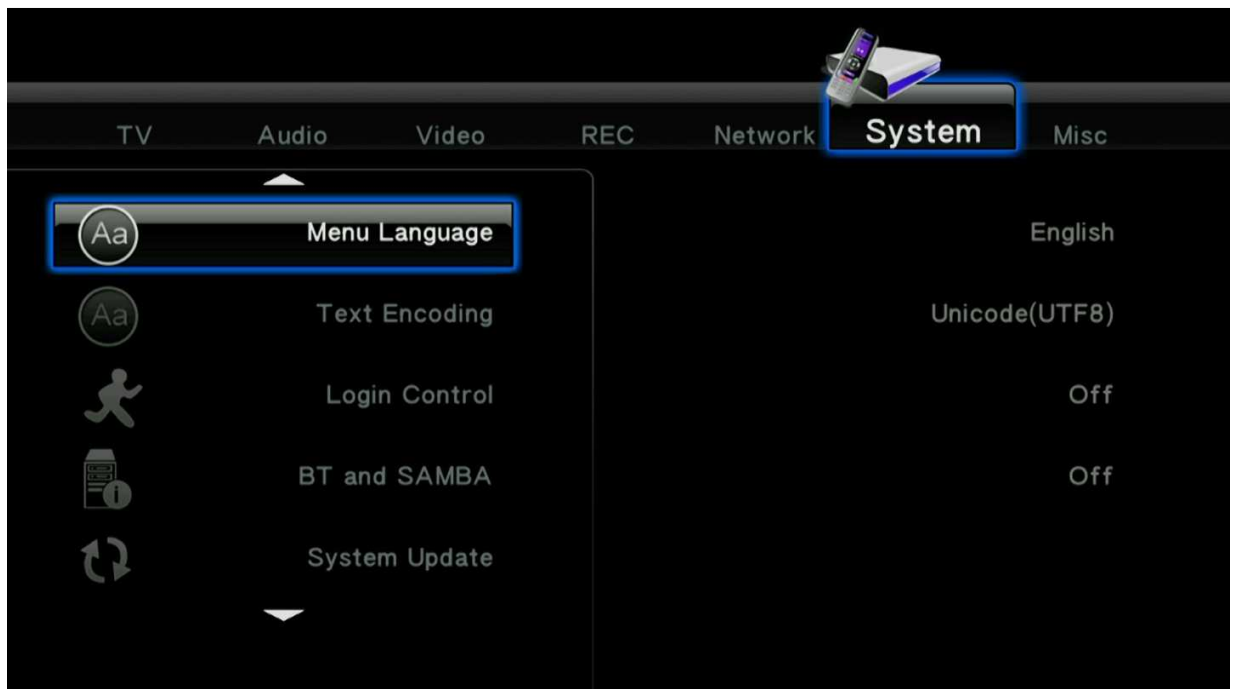


Press  and  on the remote control to select the **TV** tab from the menu.



#### TV Region

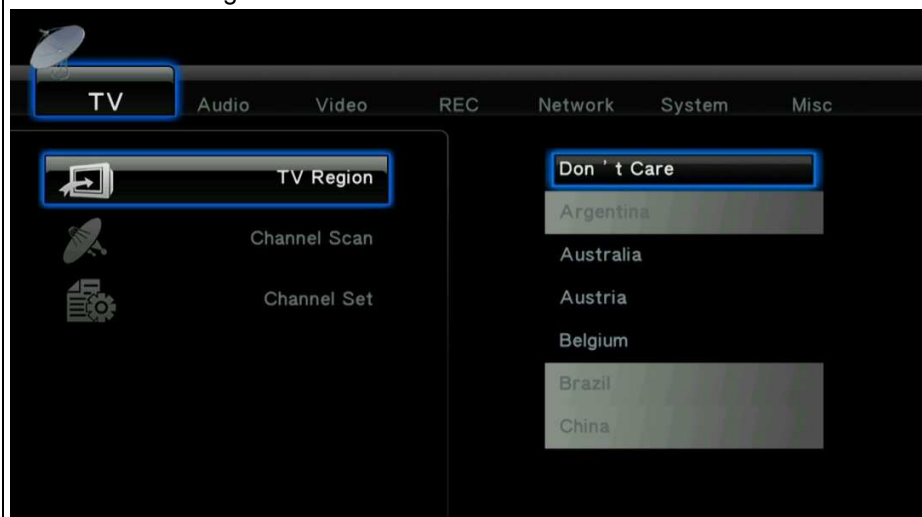
Select to set the region for TV.






Press  and  to select , Press  to confirm.

**Channel Scan**

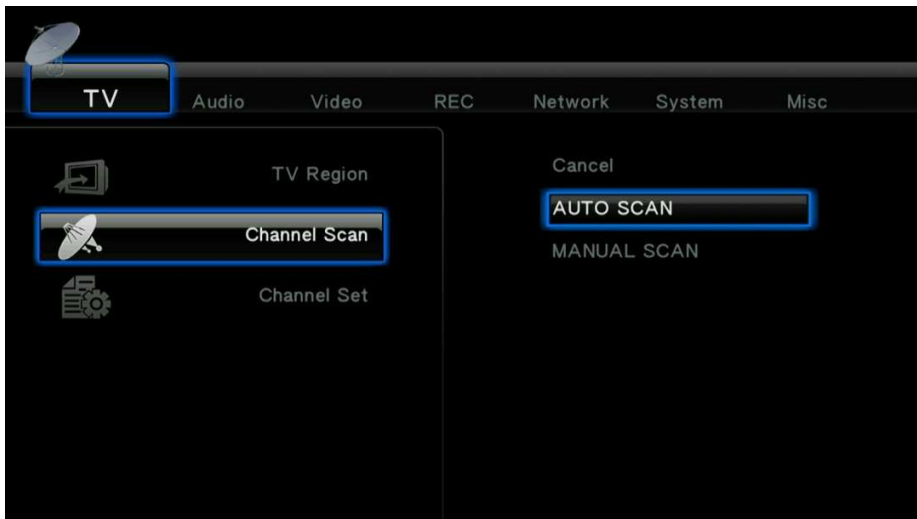Select to scan for available TV channels.



Press  and  to select **AUTO SCAN** , and press the **ENTER** button to confirm.  
**AUTO SCAN**

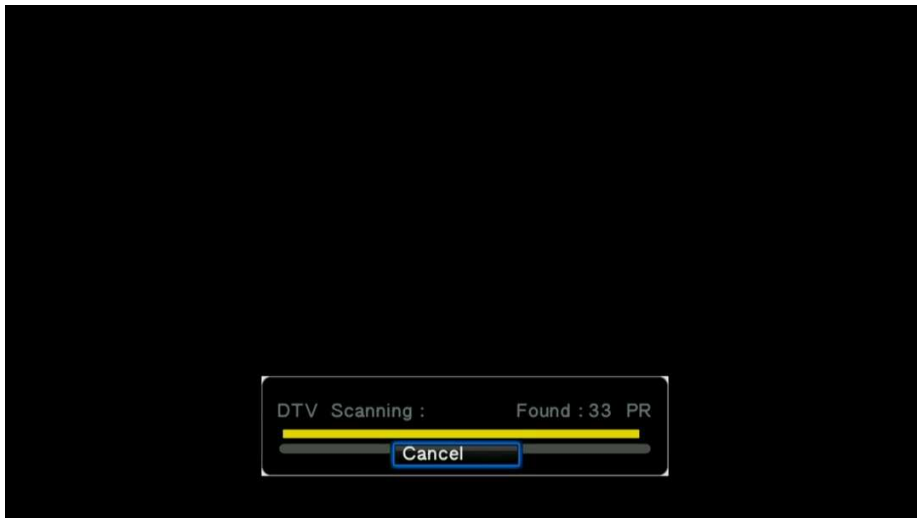


In **AUTO SCAN** mode, the system will automatically scan for available DVB-T TV channels.



In **MANUAL SCAN** mode, you can select the CH name, Bandwidth, and Input Frequency. Use the **Navigational** and **Numeric** buttons on the remote control to select or input. Press the **ENTER** button to confirm.

## Channel Set

Select to edit channel information.

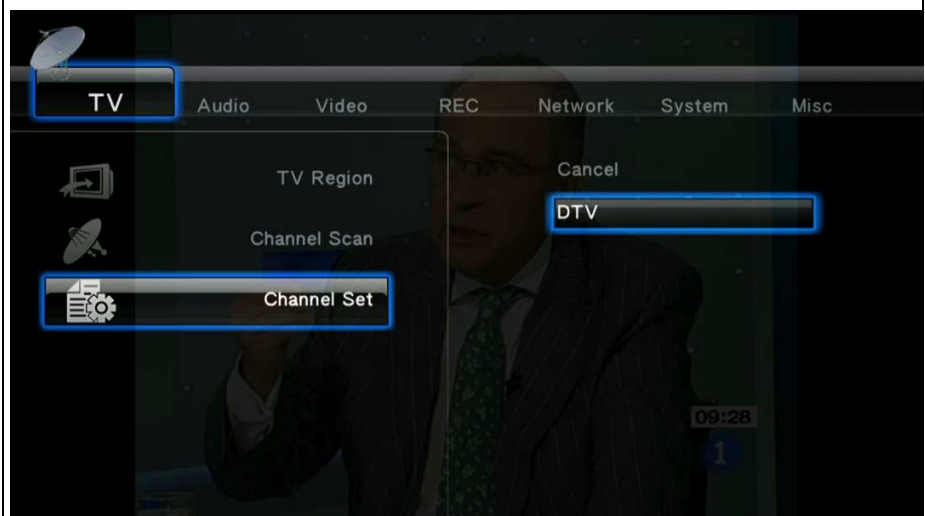


Press  and  to select **DVB-T** or **cancel**, and press  button to confirm.



In this menu, you can edit the Name, and sequence for the DVB-T TV channels. Use the **Navigational** buttons to select and modify the settings, and press the **ENTER** button to confirm. You can also press the **RED** button to select Default, and press the **BLUE** button to select Sort.

### 3.2 Changing Audio Settings

Use this menu to configure audio settings.

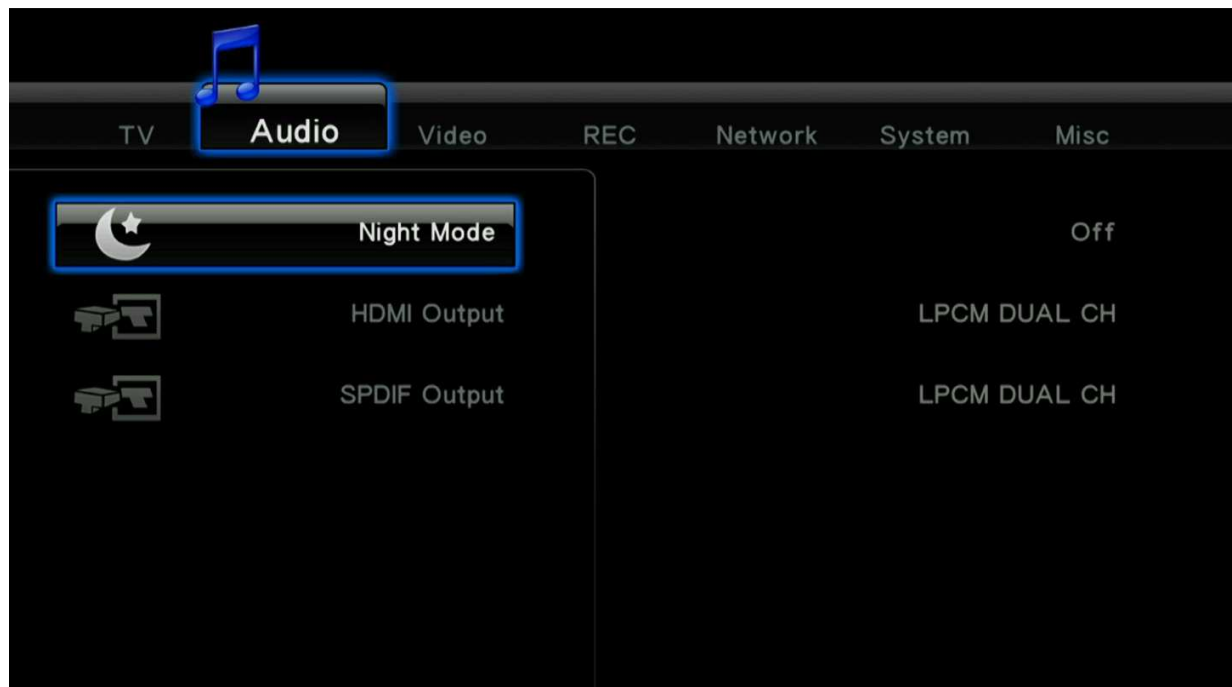

### Night Mode


- Choose between **Off / On / Comfort**. If the option is turned on, the audio output volume will be decreased to make you more comfortable.

### Digital Output

- Choose between **HDMI LPCM / HDMI RAW / SPDIF LPCM / SPDIF RAW**. In raw mode, Dolby Digital, DTS, or MPEG sound can be bypassed to the HDMI TV or Digital amplifier.

## 3.3 Changing Video Settings

Use this menu to configure video settings.

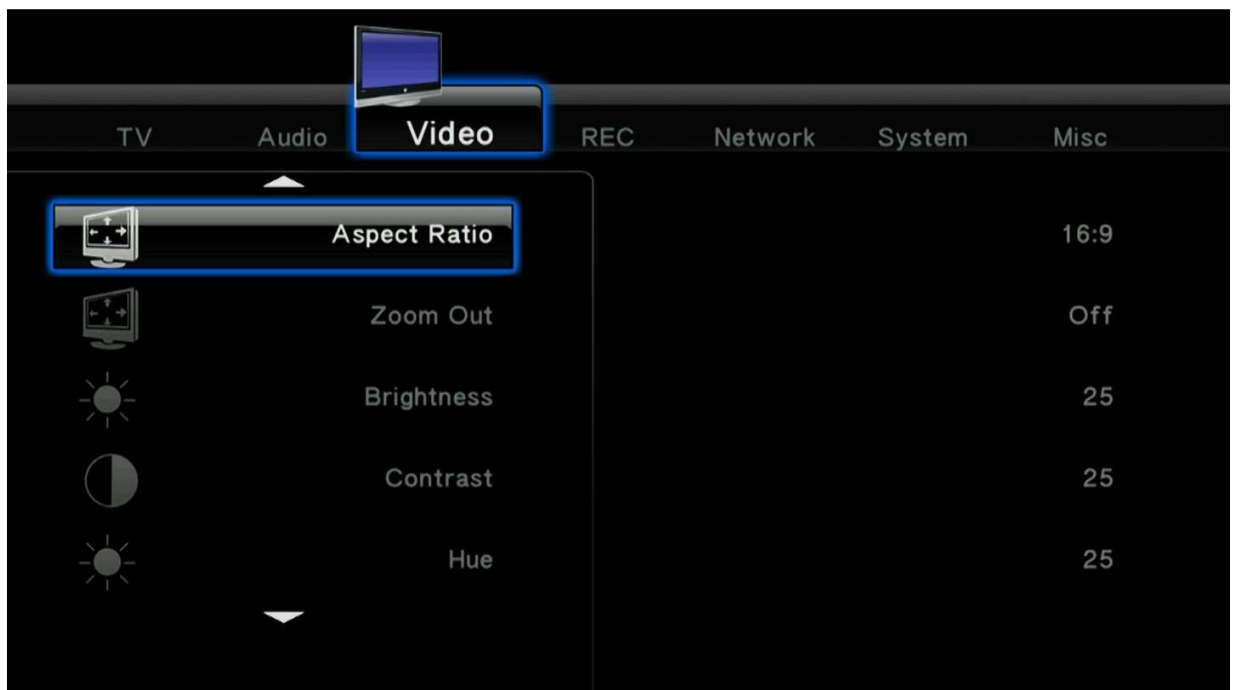

### Aspect Ratio

- **Pan Scan 4:3**: Display a wide picture on the entire screen and cuts off the redundant portions. Select when a standard 4:3 TV is connected.
- **Letter Box 4:3**: Display a wide picture with two black borders on the top and bottom of 4:3 screen. Select when a standard 4:3 TV is connected.
- **16:9**: Compress the image to convert the whole image. Select when a 16:9 TV is connected.

### Brightness

- Adjust the level of brightness.



### Contrast


- Adjust the level of contrast.





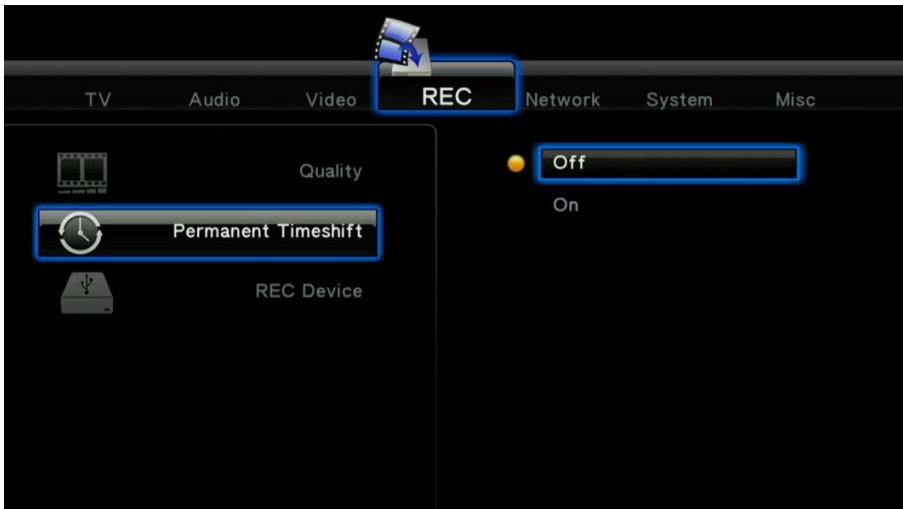



## V SYSTEM

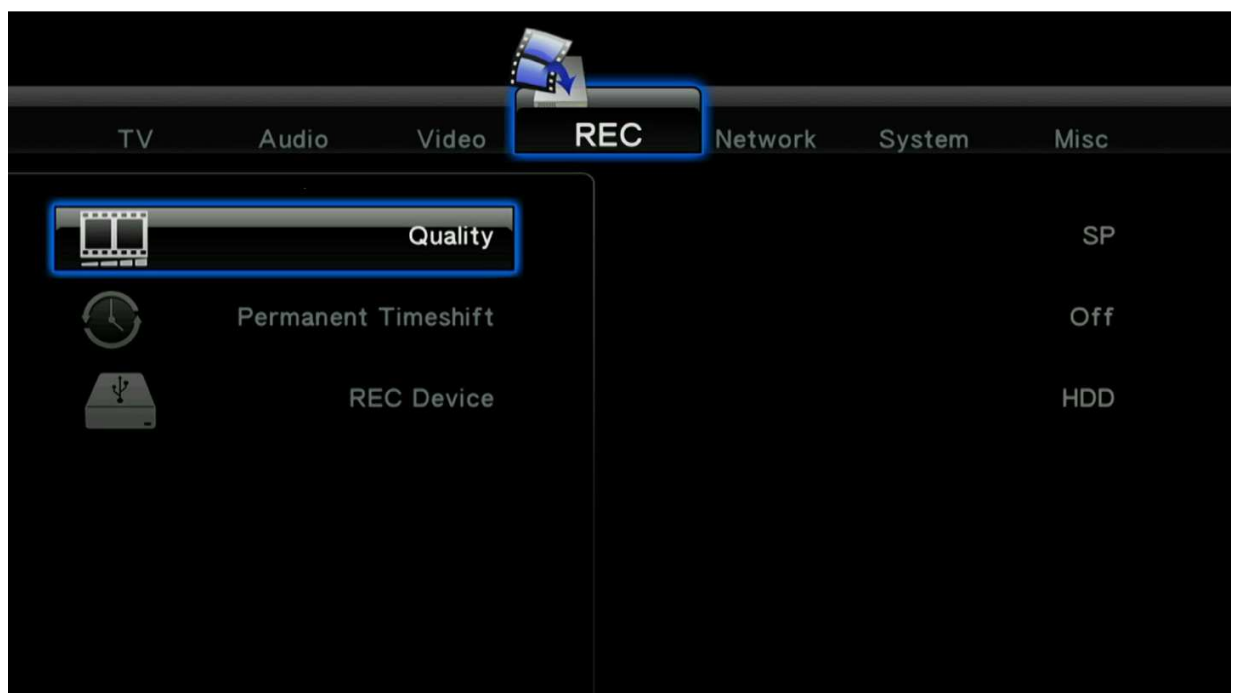



- Select to adjust video output resolution: **NTSC / PAL / 480P / 576P / 720P 50HZ / 720P 60HZ / 1080I 50HZ / 1080I 60HZ / 1080P 50HZ / 1080P 60HZ.**
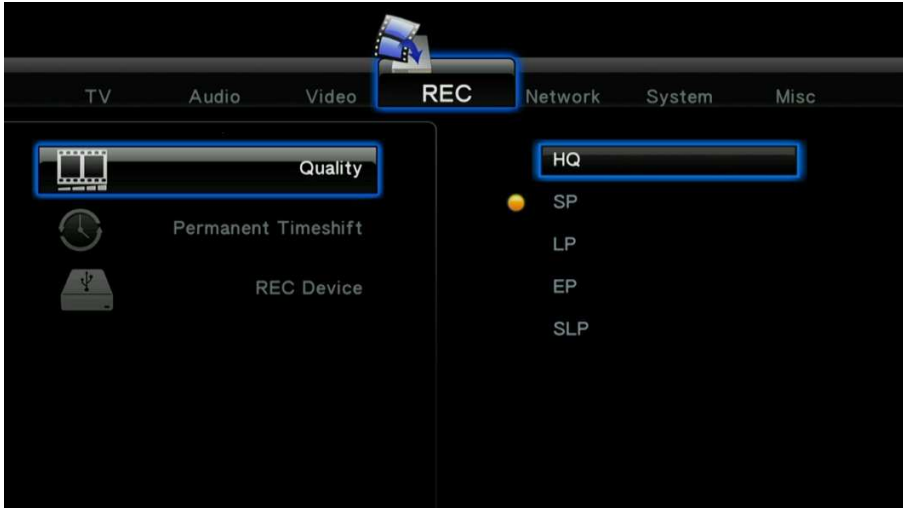
### 3.4 Changing Record Settings

Press  and  on the remote control to select the **Record** tab from the menu bar.

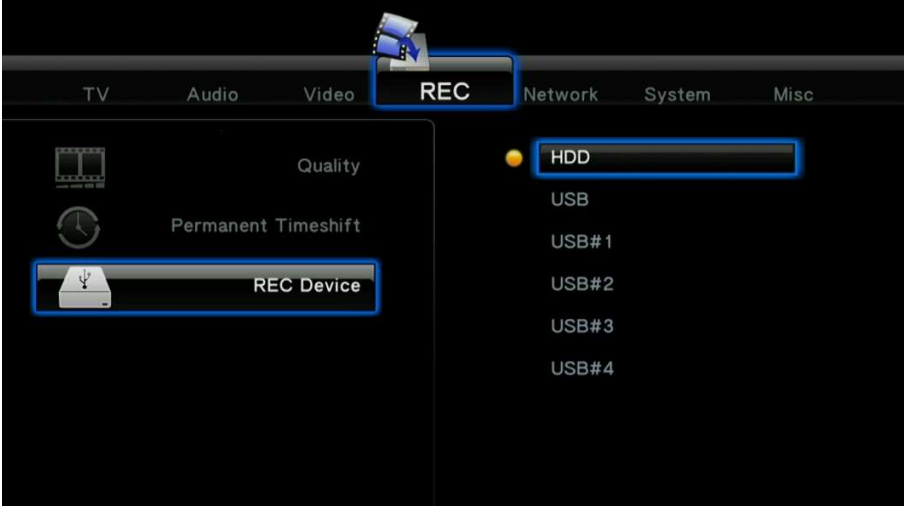

<b>Quality</b>	<p>Select to set the default recording quality setting.</p>  <p>Press  and  to select the quality setting you require. The highest quality setting is HQ which requires the most storage space. The other settings reduce recording quality sequentially but also require less storage space. Press  to confirm.</p>
<b>Permanent timeshift</b>	<p>Select to set the Permanent timeshift on or off.</p>  <p>Press  and  to select. Press  to confirm.</p>

<b>Record Device</b>	<p>Select to choose the device to which to record</p>  <p>Press  and  to select from HDD and USB.</p> <p>Press  to confirm.</p>
----------------------	--

## 3.5 Changing Network Settings

Use this menu to configure Ethernet and WLAN (Wireless Local Area Network) settings.

### Wired LAN Setup

- **DHCP IP (AUTO)**  
Select to obtain IP address automatically.
- **FIX IP (MANUAL)**  
Select to manually input the IP Address, Subnet Mask, Default Gateway, and DNS Server IP Address.



### Wireless Setup

- **Selecting a connection profile**



This player can store up to three wireless network connections. Press **ENTER** to go to next step, press **RETURN** to cancel, and press **PLAY** to connect.

- **Get Connection Mode**




Choose between **Infrastructure (AP)** and **Peer to Peer (Ad Hoc)**. Press **ENTER** to go to next step, and press **RETURN** to cancel.

- **Infrastructure (AP)**  
Infrastructure mode is used to connect computers with wireless network adapters, also known as wireless clients, to an existing wired network with the help from wireless router or access point.
- **Get SSID Name**



Press **ENTER** to go to next step, press **RETURN** to cancel, and press **SELECT** to refresh the SSID list.  
**Note:** In the Security list, **WEP** (Wired Equivalent Privacy) and **WPA** (Wi-Fi Protected Access) means the network is encrypted, i.e. an encryption key is needed to access the network. **NONE** means it is an open system network.

- Input WEP / WPA Key

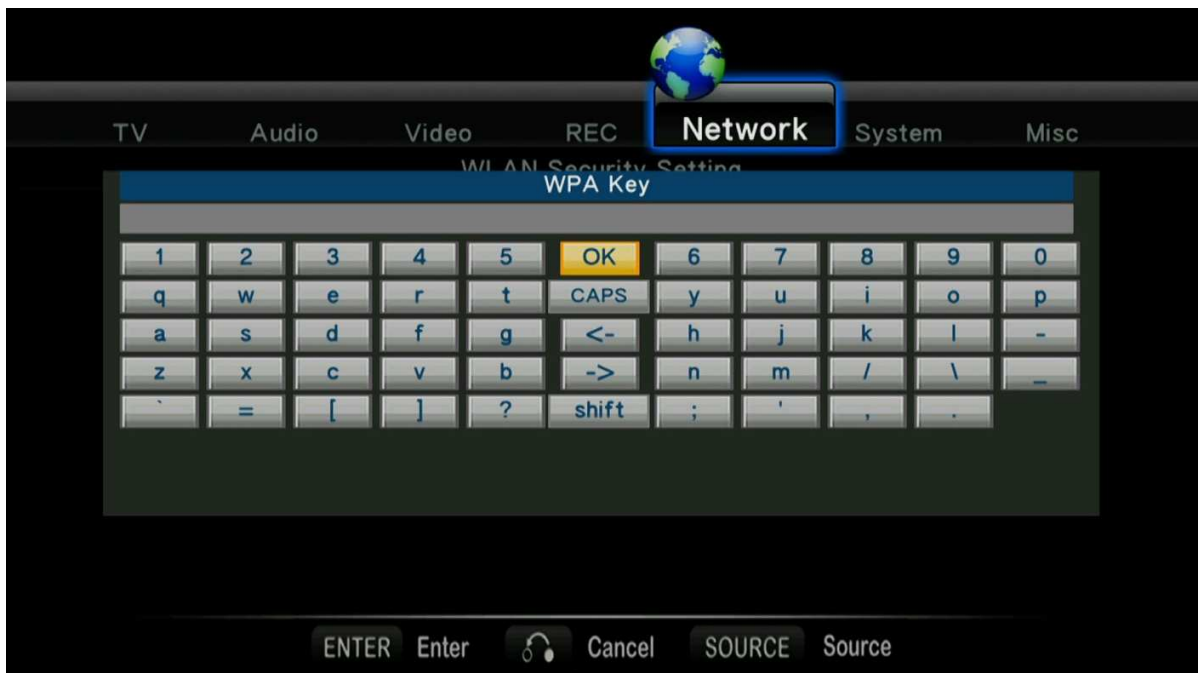

Encryption keys can be inputted via the virtual keyboard. Press the navigational buttons to select, **ENTER** to input, **CAPS** to switch between uppercase and lowercase, **<-** to delete a character, **->** to insert a space, **shift** to make more symbols available, and **OK** to confirm.

- Test connection



The testing process will take for a while, please be patient to wait. If the test is ok, the network information (Profile Name, IP address, Subnet Mask, Gateway, etc.) will be displayed on the screen.

- **Peer to Peer (Ad Hoc)**

Peer to Peer mode, which is also called Ad Hoc mode or computer-to-computer mode, is used to connect wireless clients directly together, without the need for a wireless router or access point.


#### Ad-Hoc Setup



Press **ENTER** to go to next step, press **RETURN** to cancel, and press **PLAY** to connect.

## 3.6 Changing System Settings

Use this menu to configure system settings.

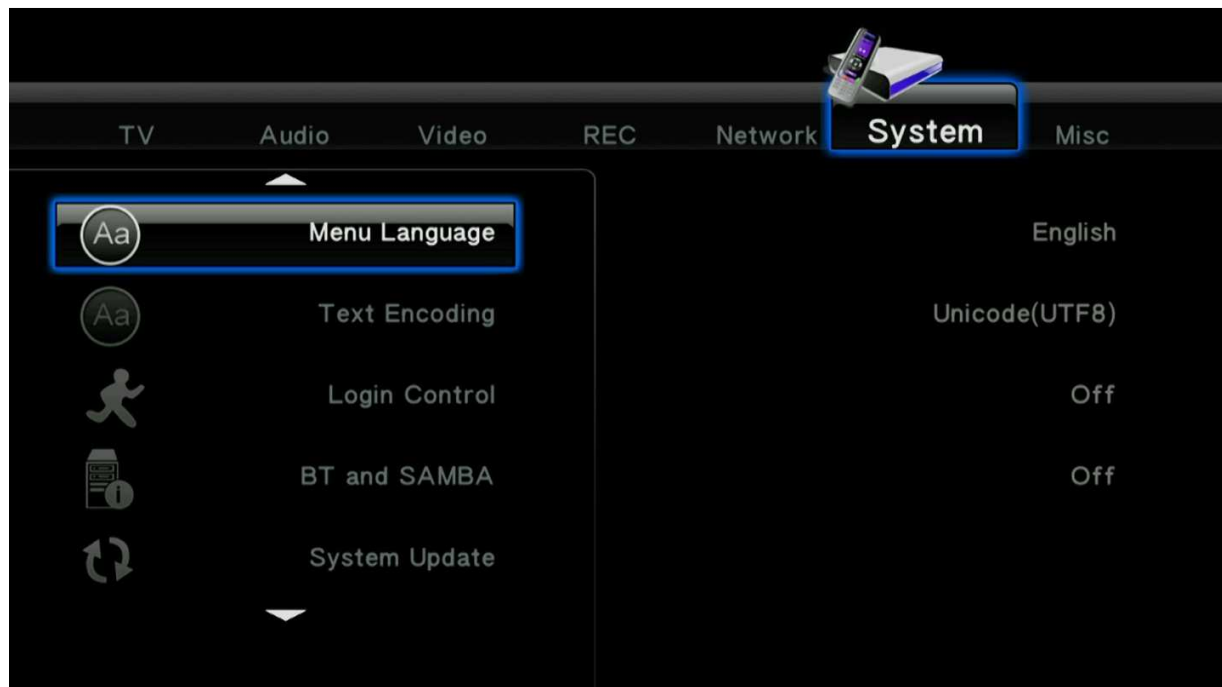

### Menu Language

- Select to choose the OSD (On-Screen Display) language.

### Text Encoding

- Select to set the text encoding option (subtitle display).

### Login Control

- Select to turn on / off password protect for the Web server (Neighbor Web).

### System Info

- Select ON/OFF to format HDD and install the BT download software.
- BT and SAMBA option to continue




### System Update



- Press "confirm" button, 【Extension Package Upgrade】 / 【System Upgrade】
- Select 【Extension Package Upgrade】 to do manually install BT download software.
- Select to update the firmware or extension package via a USB stick.
  - 1) Copy 'install.img' or extension files to the root directory of a USB stick, and connect it to the USB HOST port of the player.
  - 2) Go to **System upgrade** under setup Menu
  - 3) Press **ENTER** to confirm.

## HDD Format

### HDD Format

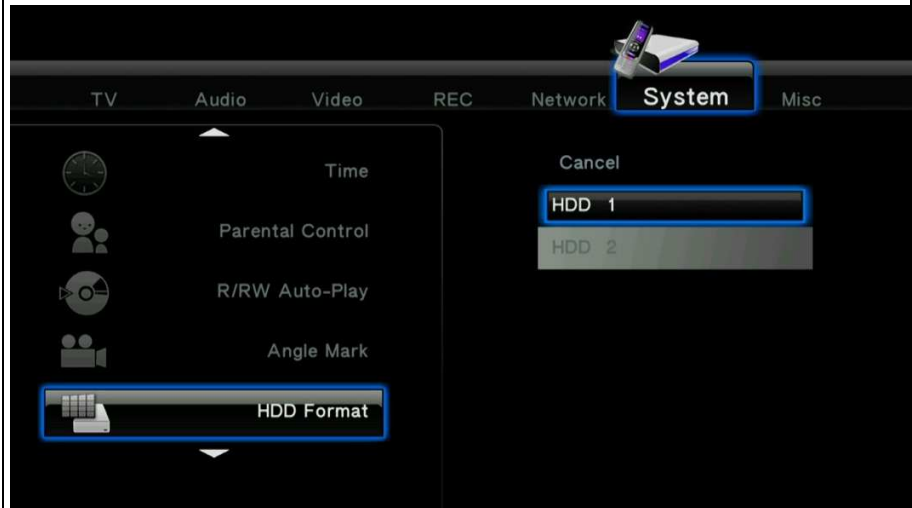
Select to HDD Format.



Press  and  button on the remote control to select **Cancel** or **CONFIRM** from the menu.


When select HDD format, please according the following steps:

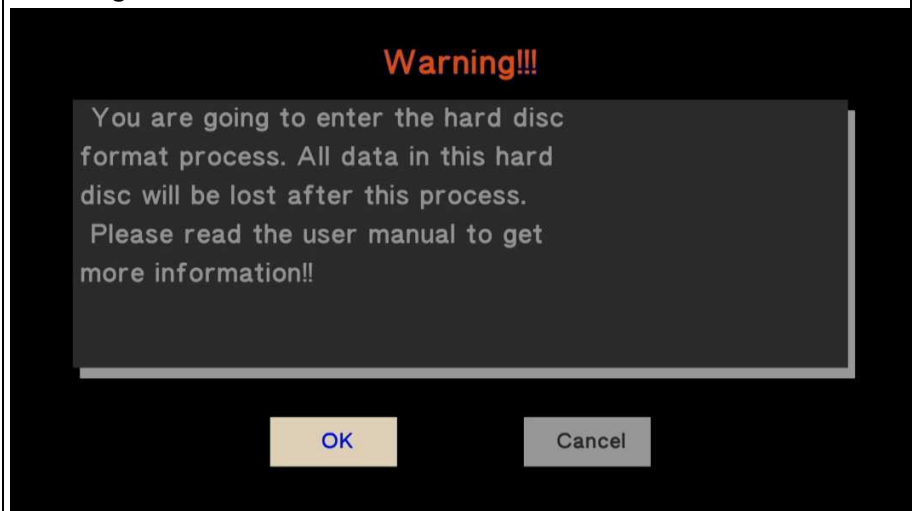

#### 1.Warring



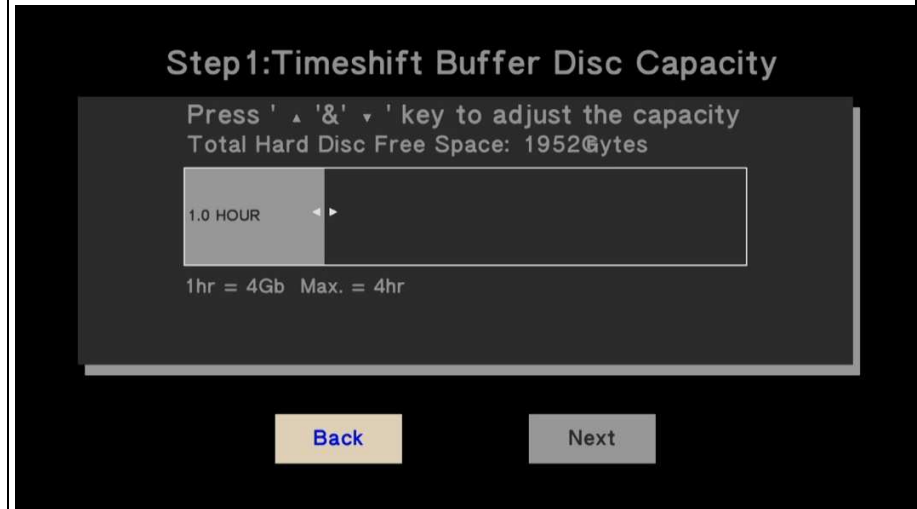


Press  and  to select OK. Press  to confirm.


## 2.Step1:Timeshift Buffer Disc Capacity



Press  and  to adjust the capacity of time shift buffer.

Press  and  to select Next, and Press  to confirm.

## 3.Step3:Hard Disc Format

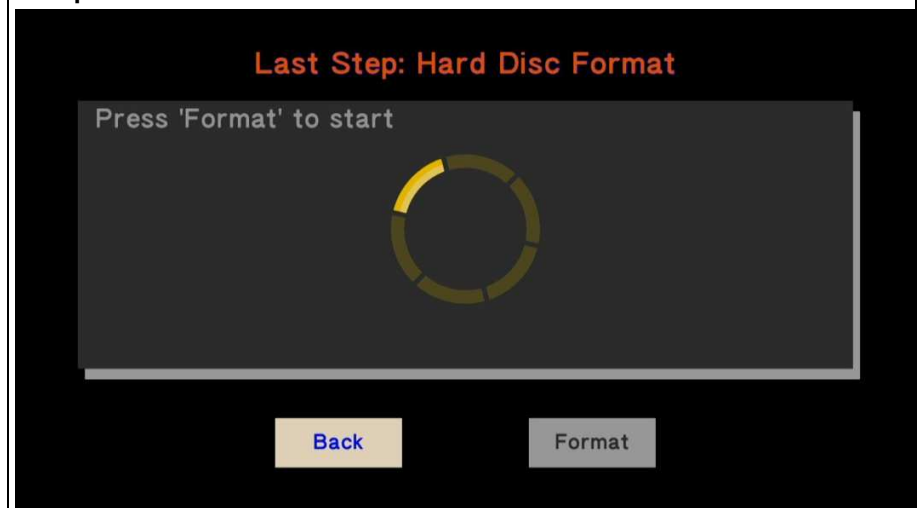

Press  and  to select Format. Press  to confirm.

And the formatting will start, which will take for several minute, please be patient to wait.



	<p><b>4. Congratulation</b></p>  <p>When formatting is completed, press  to reboot.</p>
--	---

#### **System Info**


- Select to view system information (firmware version, HDD info, Mac address, etc.)

#### **Restore Default**

- Select to restore factory defaults.

### 3.7 Miscellaneous

Use this menu to adjust miscellaneous settings.

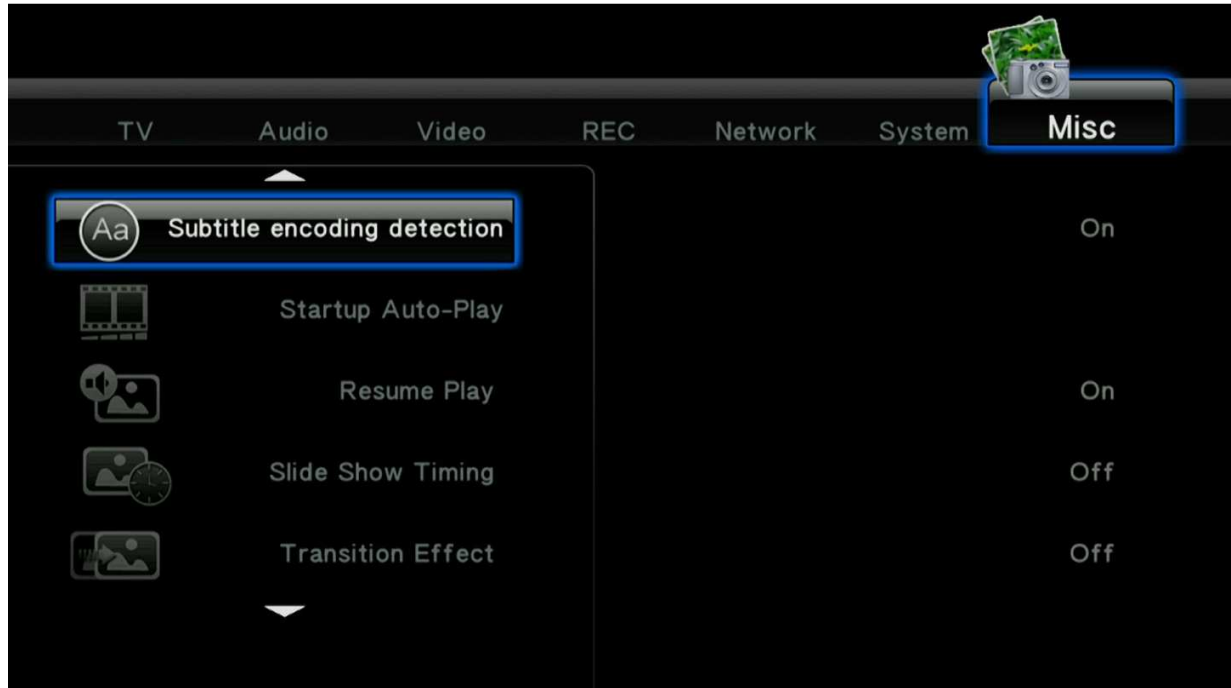

#### Slide Show Timing

- Select to set the interval time for photo slide show.

#### Transition Effect

- Select to set the transition effect for photo slide show.

#### Background Music

- Select to set the background music options while view pictures: **Off / Folder / Playlist**.

#### Screen Saver

- Select to turn on / off screen saver.

#### Movie Preview


- Select to turn on / off movie preview in the browser menu.

#### Resume Playback

- Select to turn on / off resume playback (auto-bookmarking) feature for movies.

## 4. Browser Menu

The browser menu allows you to browse and play media files stored on Removable Devices DVD,(USB, Card), HDD, Network, UPnP-server, and Playlist. To enter the menu, select the **Browser** icon on the home screen, or press the **BROWSER** button on the remote control.

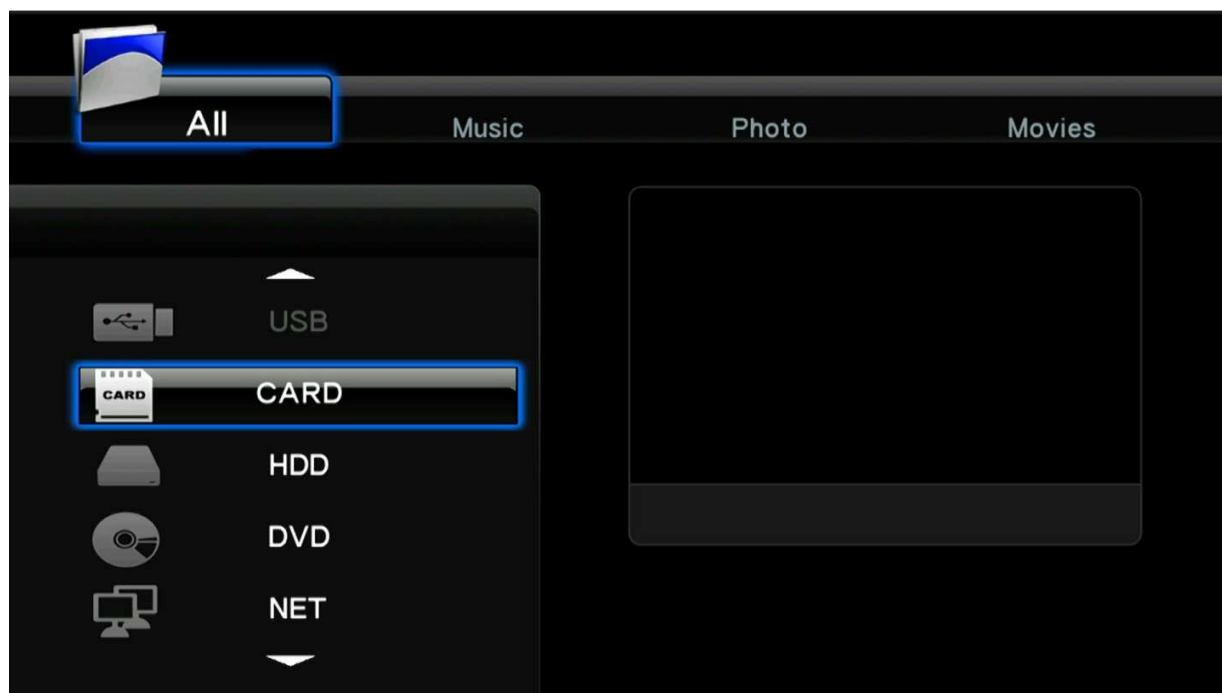


The following buttons can be used while navigating the browser menu.

Button	Function
UP / DOWN	Move cursor up / down to select devices, folders, or files.
LEFT / RIGHT	Select filter options: <b>All</b> , <b>Music</b> , <b>Photos</b> , and <b>Movies</b> .
PREV / NEXT	Go to previous / next page.
ENTER	Enter or confirm the selected item.
SELECT	Select files under <b>Browser</b> -> <b>HDD</b> menu.
CONFIRM	Add the selected files to the playlist.
RETURN	Return to the previous menu.

## 4.1 Browsing All

In this mode, all folders and supported contents (music, photos, and movies) will be displayed.

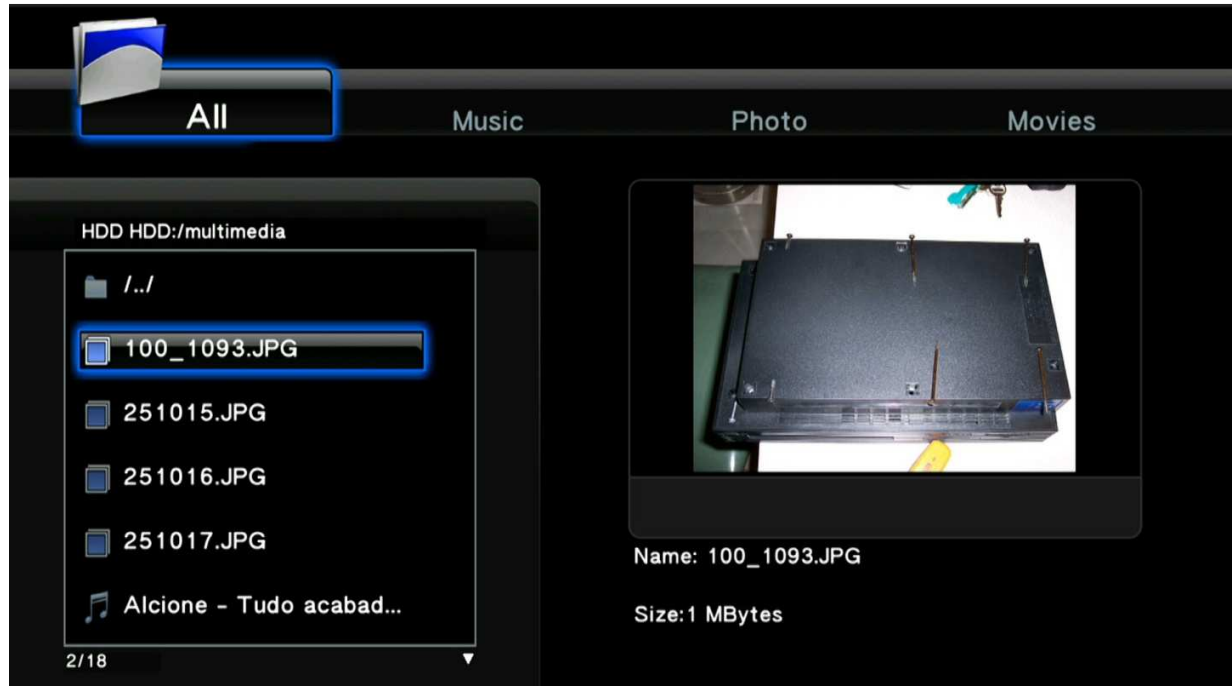


**Note:**

- Please refer to chapter '**10.1 Specifications**' for more about the supported content formats.
- Music tracks might not be able to be played continuously under **All** filter, please switch to the **Music** filter instead.

## 4.2 Browsing Music

In this mode, all folders and supported audio files in current directory will be displayed.

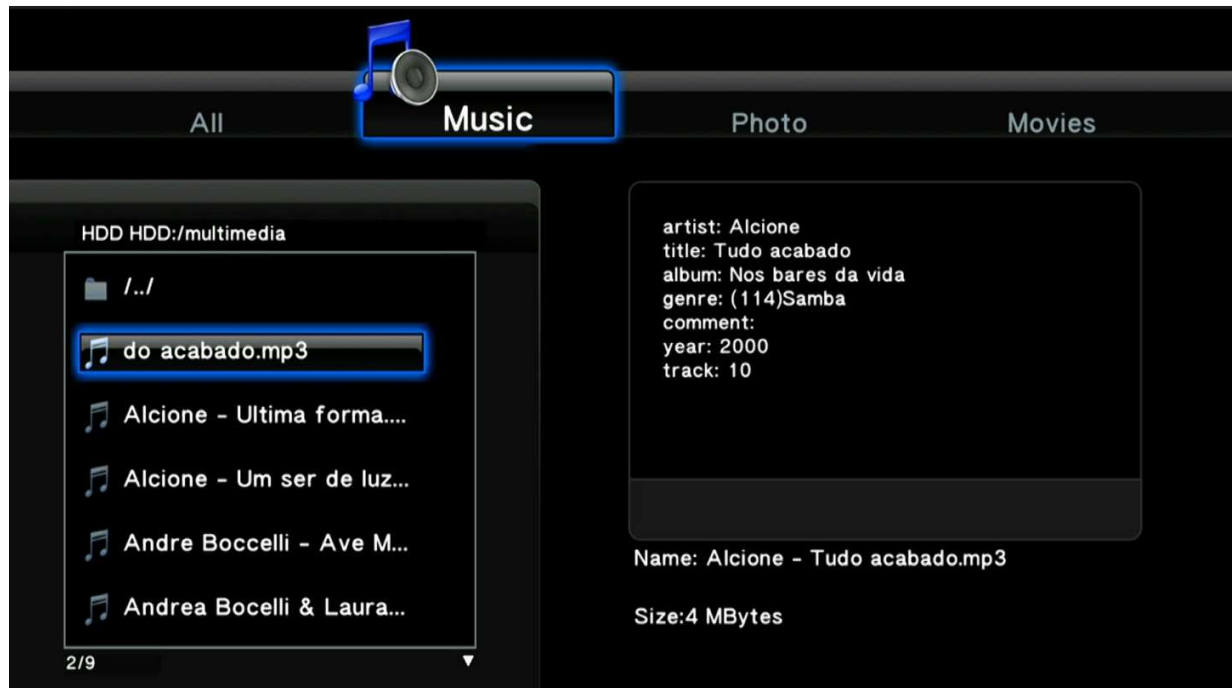


The following buttons can be used to control music playback.

Button	Function
<b>PLAY</b>	Begin playback.
<b>PAUSE / STEP</b>	Pause playback.
<b>FR / FF</b>	Fast rewind or fast forward. Press repeatedly to select the speed.
<b>REPEAT</b>	Set repeat options: <b>One</b> , <b>All</b> , (and <b>Shuffle</b> ).
<b>INFO</b>	Hide or display the information bar during playback.
<b>STOP</b>	Stop playback.

## 4.3 Browsing Photos

In this mode, all folders and supported image files in current directory will be displayed.

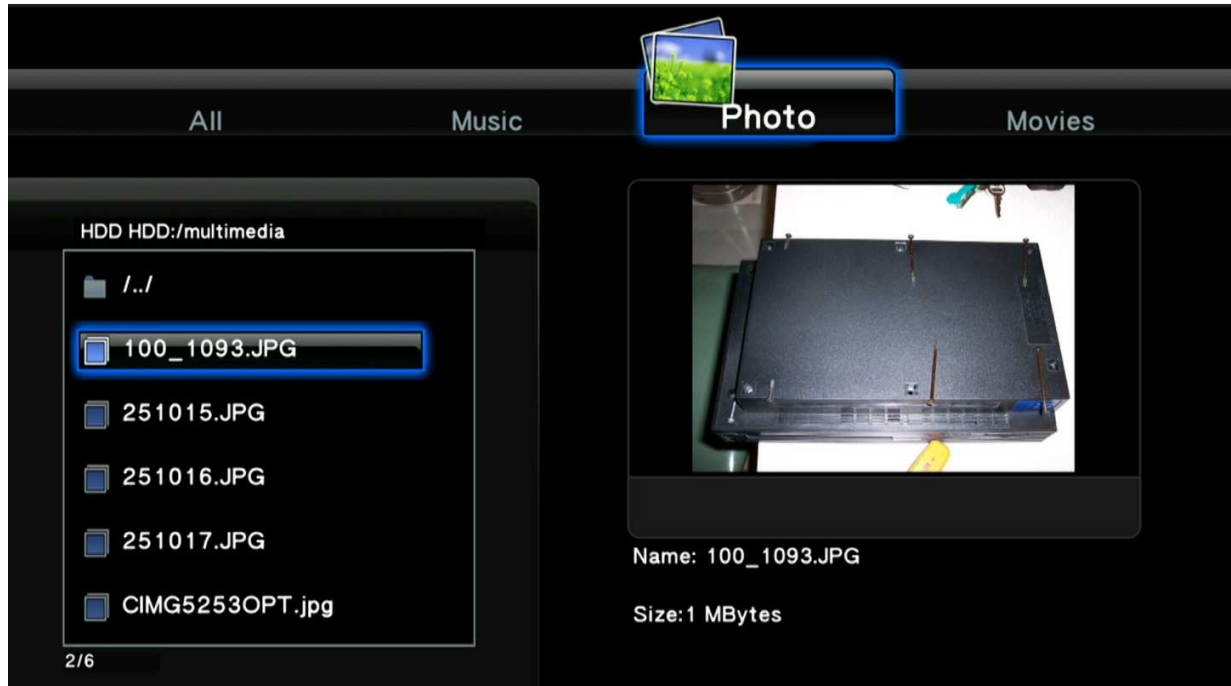


The following buttons can be used to control music playback.

Button	Function
<b>PLAY</b>	Begin playback.
<b>PREV / NEXT</b>	View the previous or next photo.
<b>LEFT / RIGHT</b>	Rotate a photo in any angle.
<b>REPEAT</b>	Set repeat options: <b>One</b> , <b>All</b> , (and <b>Shuffle</b> ).
<b>ZOOM IN / OUT</b>	Zoom in / out the image.
<b>INFO</b>	Hide or display the information bar during playback.
<b>STOP</b>	Stop playback.

You can view photos in slide show mode with background music. When it is enabled, the slide show starts automatically once you press **PLAY** button. (Please refer to **Slide Show Timing**, **Transition Effect**, and **Background Music** in chapter '**3.7 Miscellaneous**' for more details)

## 4.4 Browsing Movies

In this mode, all folders and supported video files in current directory will be displayed.

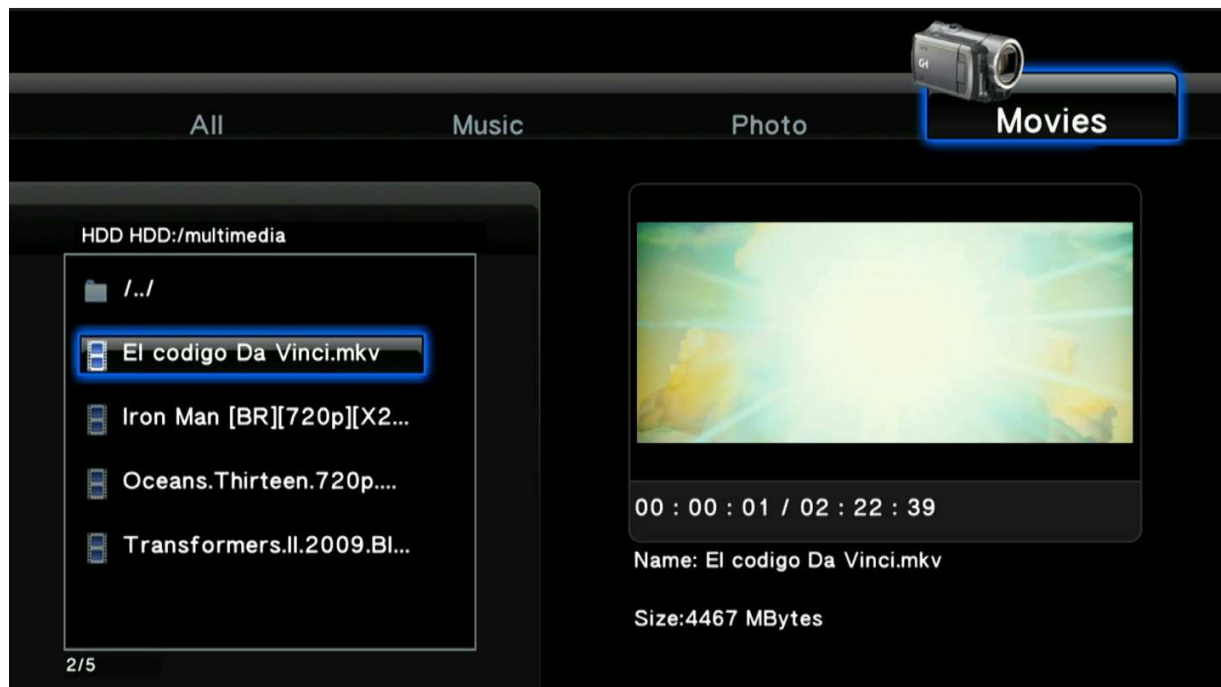


The following buttons can be used to control video playback.

Button	Function
<b>PLAY</b>	Begin playback.
<b>PAUSE / STEP</b>	Pause playback; Press again to step to next frame.
<b>SLOW</b>	Play video in slow motion. Press repeatedly to select the speed.
<b>FR / FF</b>	Fast rewind or fast forward. Press repeatedly to select the speed.
<b>PREV / NEXT</b>	View the previous or next movie.
<b>REPEAT</b>	Set repeat options: <b>One</b> , <b>All</b> , (and <b>Shuffle</b> ).
<b>ZOOM IN / OUT</b>	Zoom in / out the image.
<b>INFO</b>	Hide or display the information bar during playback.
<b>GOTO</b>	Display playback search menu.
<b>A-B</b>	Set the beginning and end points of a section to repeat.
<b>ANGLE</b>	Change the view angle during DVD (with multi-angle) playback.
<b>MENU</b>	Return to the root menu during DVD playback.
<b>INS REPLAY</b>	Backward 10 seconds of the current playback
<b>CM SKIP</b>	Advance 30 seconds of the current playback.
<b>AUDIO</b>	Select an audio track while watching BivX video or DVD with multiple audio tracks.
<b>SUBTITLE</b>	Set subtitle options.
<b>STOP</b>	Stop playback.

## 4.5 A/V Streaming via Network

You can stream the media files shared on the home network (Ethernet or WLAN). Please refer to '**3.5 Changing Network Settings**' for details about network settings.

There are two ways to locate media files shared on your local network in the **Network** menu. One is to browse through workgroup; the other way is to browse through '**My\_Shortcuts**'.

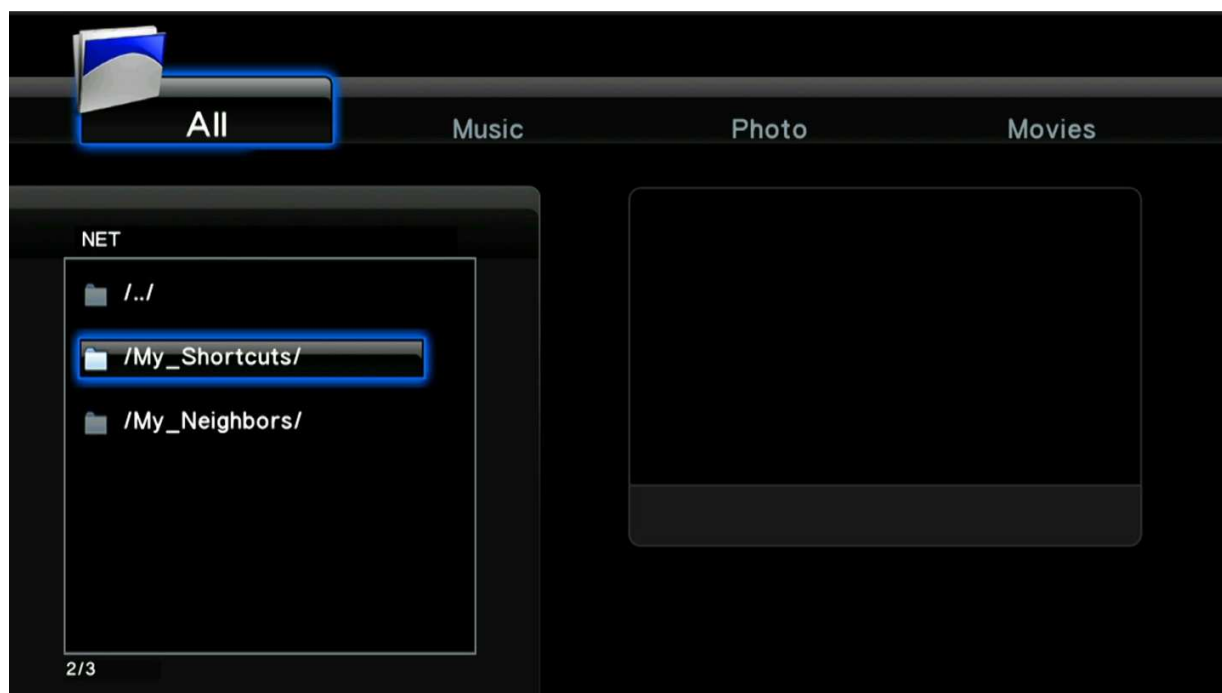

### 4.5.1 Browsing through Workgroup

You can choose the workgroup which your PC belongs to from the workgroup list, find your PC name, and press the **ENTER** button to confirm. Then you can select and play the shared media files that you want to browse.

**Note:**


- While browsing high definition video files (resolution up to 720p / 1080i / 1080p) via Ethernet or WLAN, the video might be buffering. It is normal due to the limit of network speed or signal strength.
- Due to different network conditions, sometimes the workgroup might not be accessed or shown in the list. And then you need to use '**My\_Shortcuts**' to browse shared files.




#### 4.5.2 Browsing through 'My\_Shortcuts'

You can also set '**Specific File Server IP**' and access it from '**My\_Shortcuts**' in the menu.


- Press the **MENU** button and a popup menu appears.

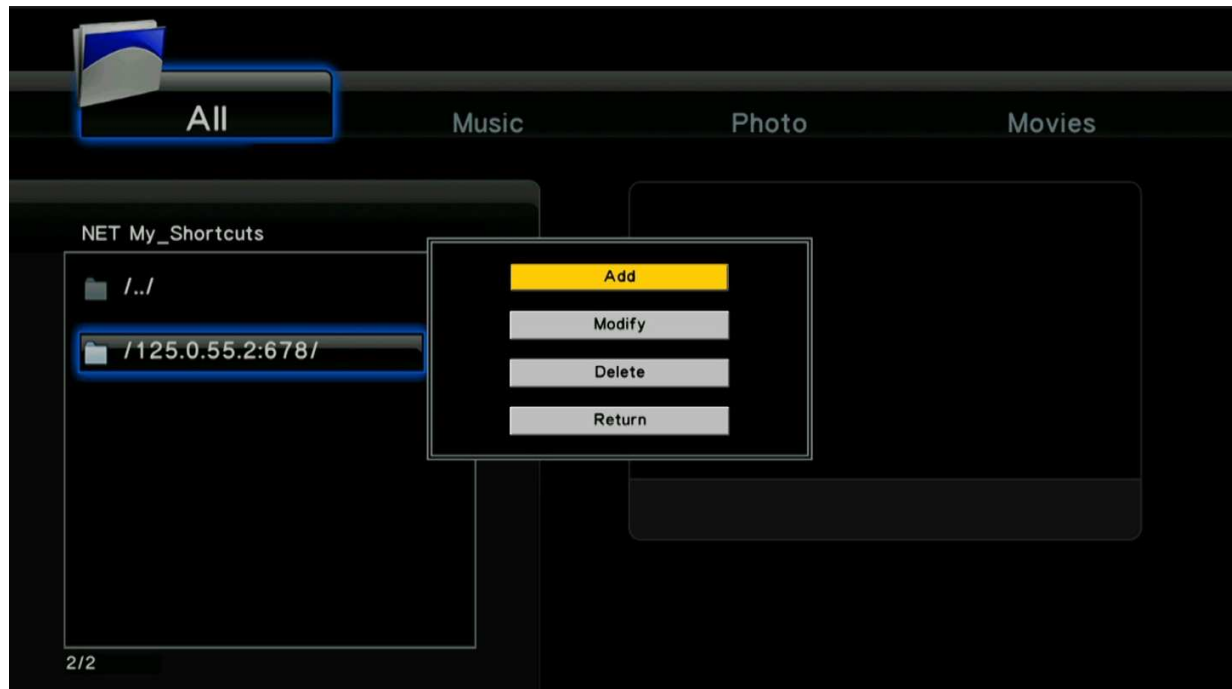

- Select **Add** to open a popup menu where you can input **Label**, **Net User ID**, **Net Password**, **Domain**, **Host Name**, and **Specific File Server IP**. Select **OK** to confirm, **Cancel** to cancel, and **Simple / Detail** to switch between simple and advanced options.

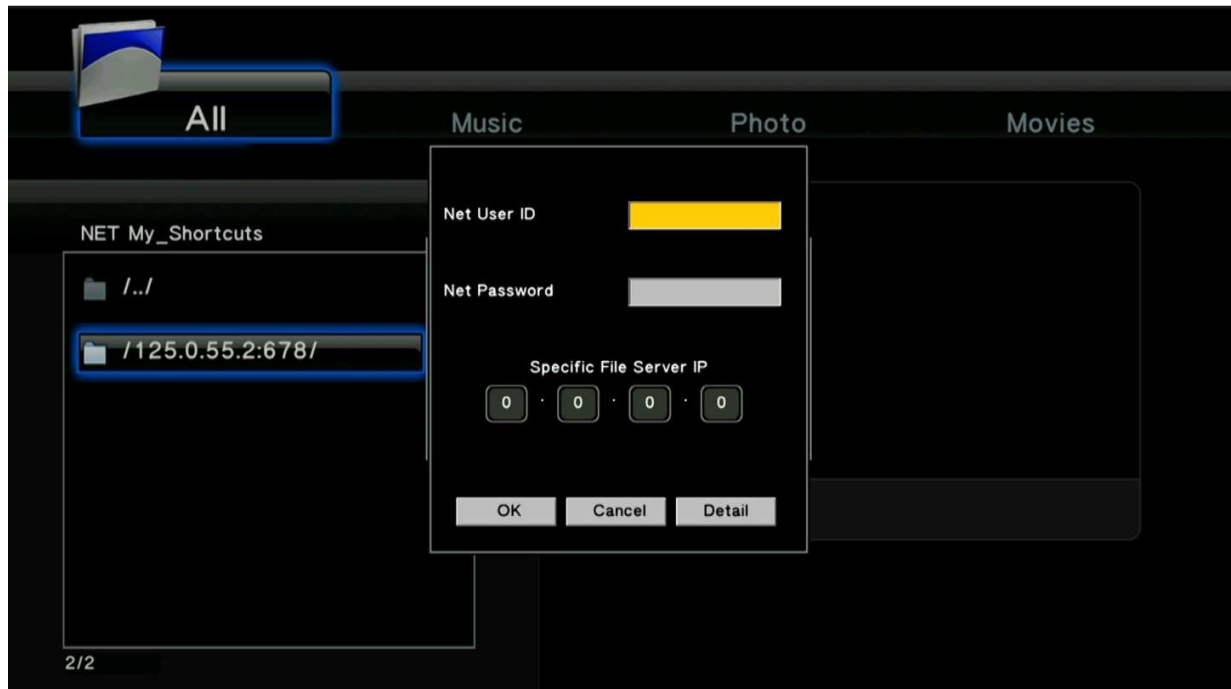

- Select the shortcut you added and press the **ENTER** button to confirm. Then you can select and play the shared media files on the destination computer.

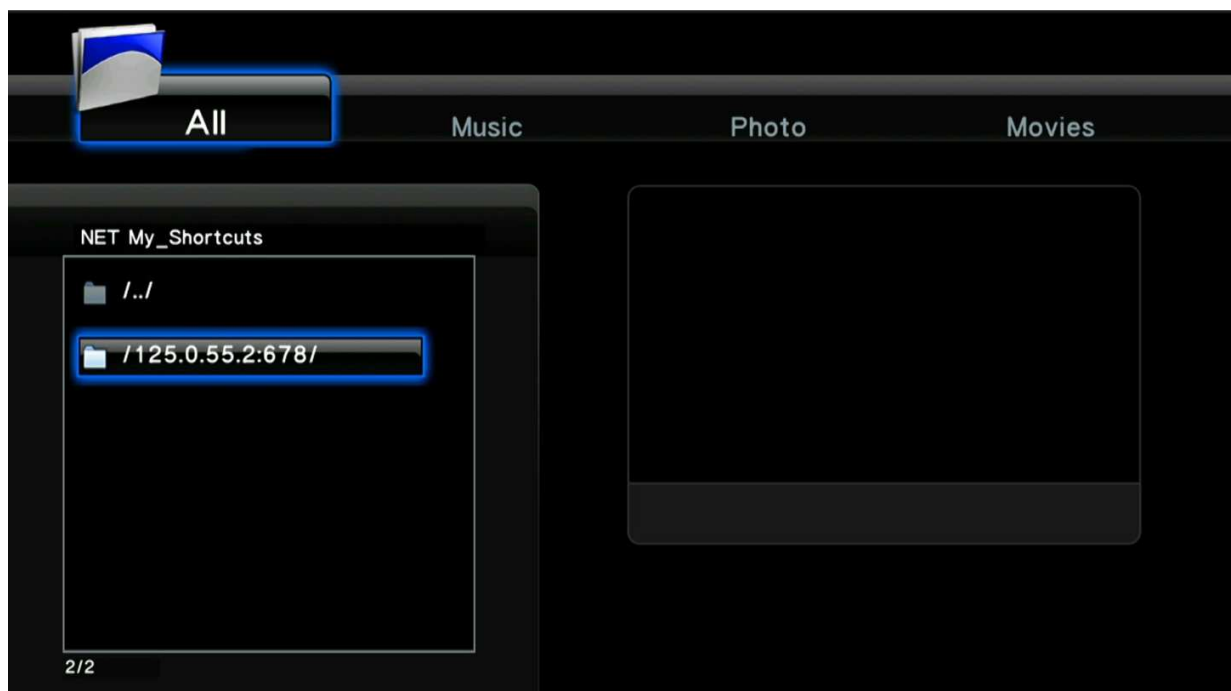

## 4.6 A/V Streaming via UPnP-server

A built-in UPnP (Universal Plug and Play) client has been integrated on the system, which enables the player to auto-detect UPnP Media Servers on the network to browse and stream media files from them.


### 4.6.1 Installing UPnP Media Server on your PC

There're a lot of free and commercial UPnP Media Server software, such as Windows Media Connect, Windows Media Player 11, XBMC Media Center (Linux/Mac/Windows), MediaTomb (Linux), etc. Please install one of them on you computer. In the following chapters, we will take Windows Media Player 11 on Microsoft Windows XP SP2 for an example.


### 4.6.2 Sharing Media on your PC

The Media Sharing feature of Windows Media Player 11 lets you enjoy the contents of your Windows Media Player library from anywhere in your home.

- Open Windows Media Player 11, click **Library** -> **Add Library** -> **Advanced Options** to add or remove media files from the library.

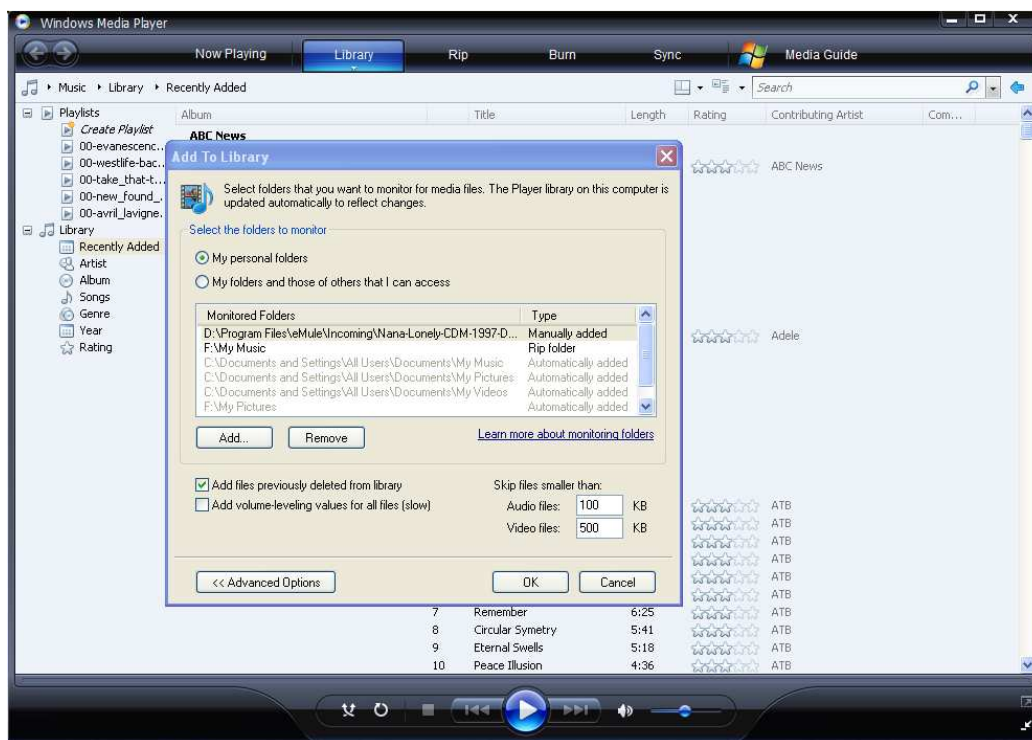


- Click **Library** -> **Media Sharing**, then you can allow or deny devices to access the media library. Click **Allow** to authorize your player.

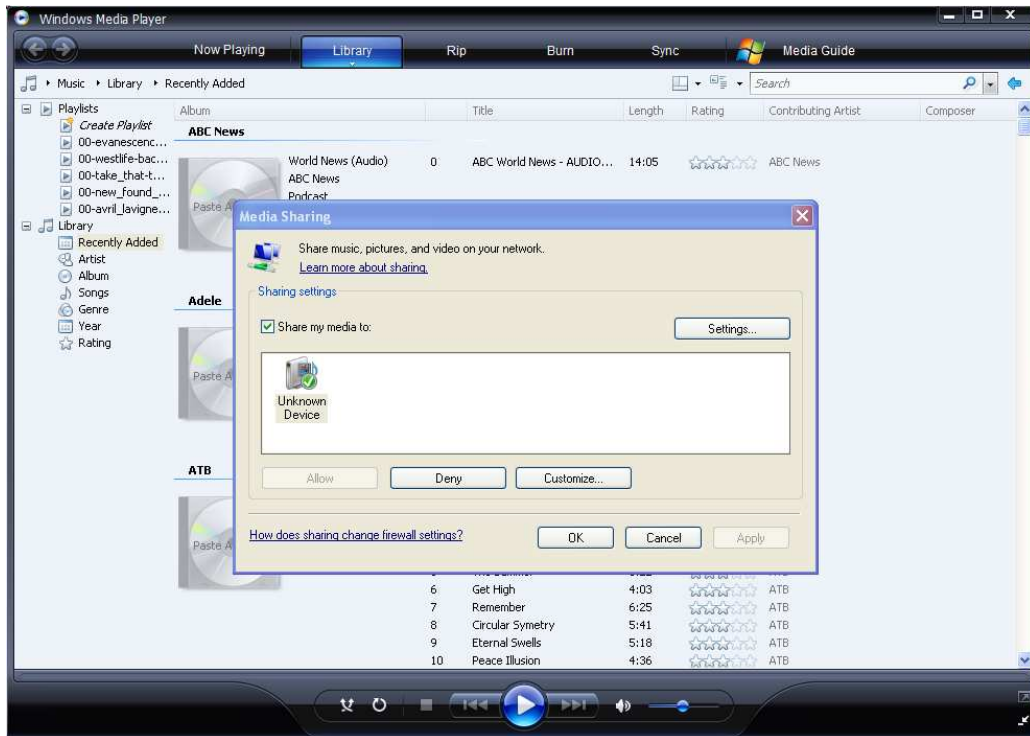


#### 4.6.3 Streaming Media on your Player

- Connect your player to the home network (LAN or WLAN).
- Visit **Browser** -> **UPnP** menu on the player, select the UPnP-server, and press **ENTER**.

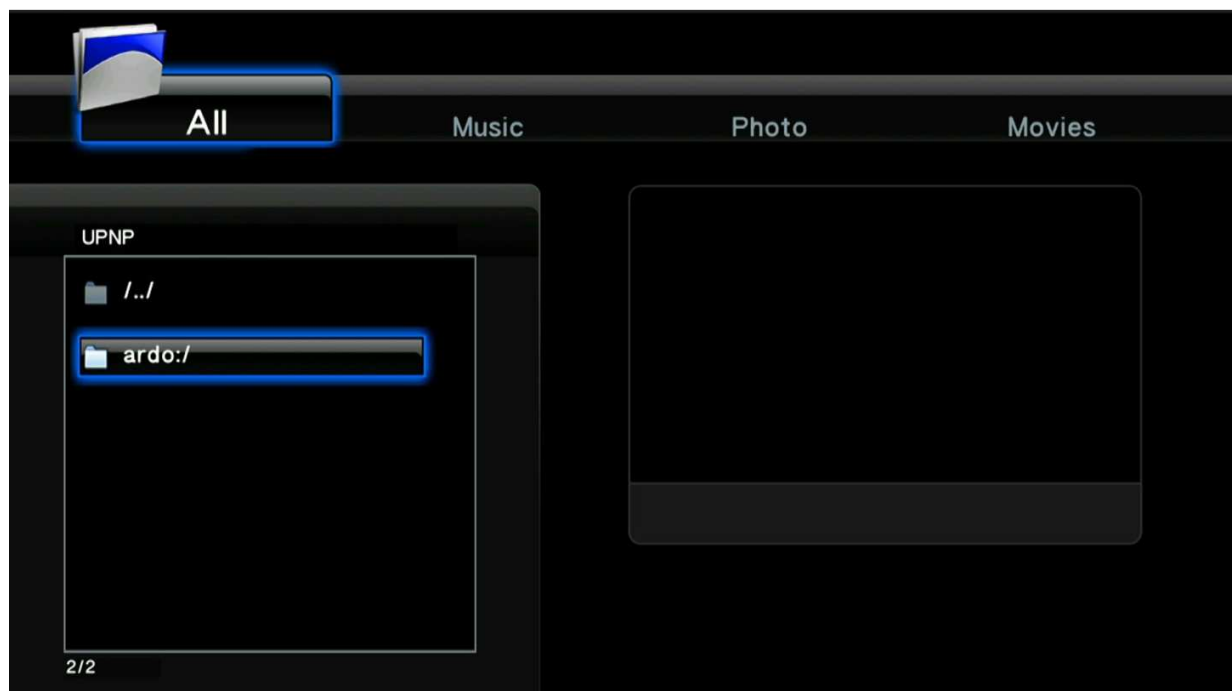

- Then you can browse the media library shared by Windows Media Player 11.

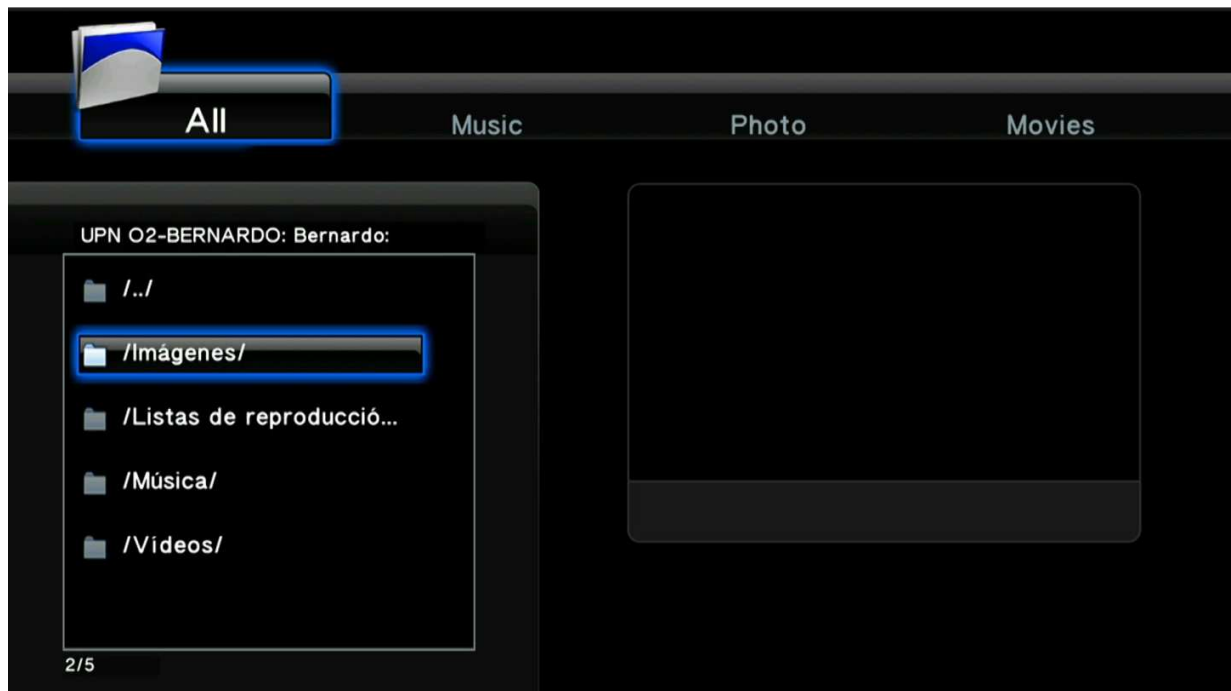


**Note:**

- Make sure your player and your computer are on the same local area network and subnet.
- Firewalls may prevent your player to communicating with your computer. Please open the ports manually and add your player to the 'trusted' list, or disable the firewall temporarily.

## 4.7 Renaming / Deleting Files


When navigating in the browser menu, you can press the **MENU** button to activate a popup menu where you can rename and delete files or folders.

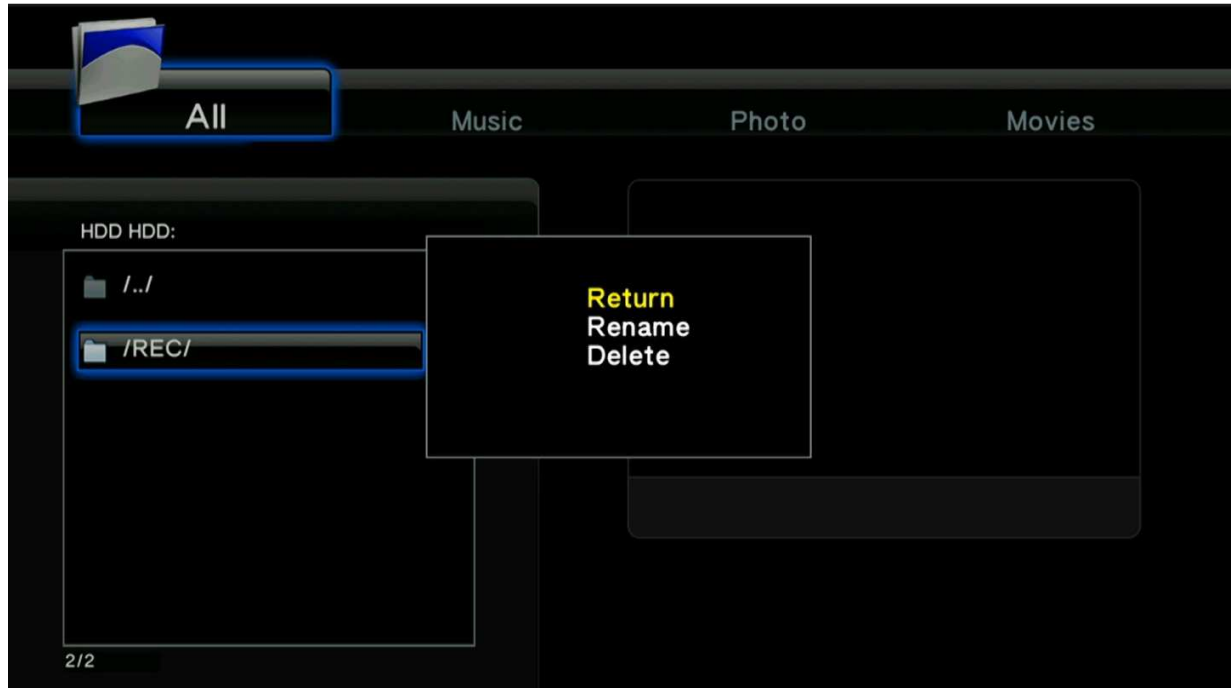

Press the **UP / DOWN** buttons to select from **Return**, **Rename**, and **Delete**. And press **ENTER** to confirm.

## 5. File Copy Menu

Select the **File Copy** icon from the home screen to enter the **File Copy** menu, which allows you to copy files between Removable Devices (Card, USB), HDD, and Network.

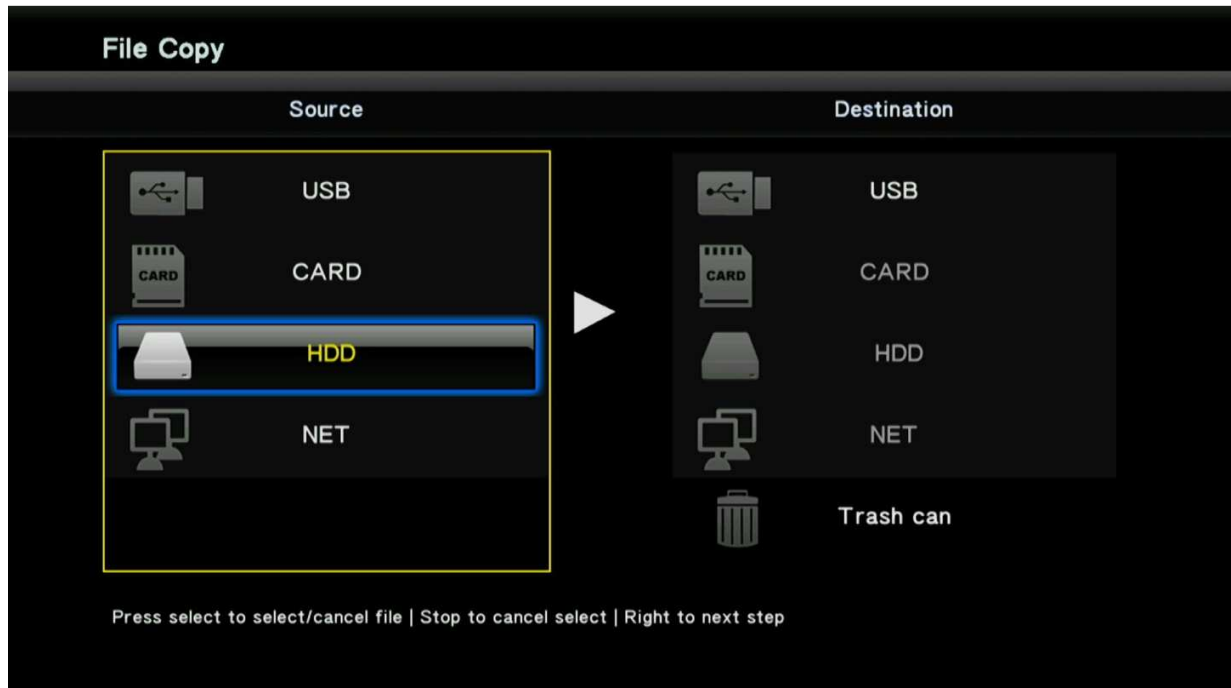

The following buttons can be used under the file copy menu.

Button	Function
<b>UP / DOWN</b>	Move cursor up / down to select devices, folders
<b>RIGHT</b>	Go to the next step.
<b>SELECT</b>	Select (or cancel) folders or files (The selected items will be ticked).
<b>STOP</b>	Cancel all selections.
<b>ENTER</b>	Confirm the selected options.

Please refer to the following operations to copy / move folders / files between devices.

- Step 1: Select the source device and destination device.
- Step 2: Select the source files you want to copy.
- Step 3: Select the destination folder to store the above files.
- Step 4: Select **Copy** or **Move** to proceed.

The following buttons can be used under this menu.

Button	Function
<b>UP / DOWN</b>	Move cursor up / down to select station, channel, and genre.
<b>PREV / NEXT</b>	Page up / down.
<b>ENTER</b>	Confirm and enter the selected menu.
<b>MENU</b>	Add / delete a station to / from <b>Favorite</b> while it is highlighted.
<b>PLAY</b>	Begin playback after a channel has been selected.
<b>STOP</b>	Stop playback.
<b>RETURN</b>	Return to the previous menu.

### Station

- All downloaded stations will be listed under this menu.


### Genre

- You can search for stations by genre (pop, rock, jazz, etc.) under this menu.

### Favorite

- Your favorite stations can be kept under this menu.

## 6. Selecting Time REC

To enter the Time REC setup page, select  on the remote control or select **Timer REC** button on the guide menu page.

### 6.1 Watching TV

Equipped with an internal Dual TV Tuner, It's supporting recording another while watching one channel .Please refer to ' **Changing DVB-T TV settings'** on **page 15** in order to make correct settings before reading the following chapters.

#### 6.1.1 Watching DVB-T TV programs

To enter the TV mode, select the **Video in** icon on the main interface.



The following are some functional buttons on the remote control available during watching Digital TV programs.

Name	Function
<b>ENTER</b>	Press to view the program list menu.
<b>UP / DOWN</b>	Press to switch channels. (Channels cannot be switched in the recording mode.)
<b>PREV / NEXT</b>	
<b>Numeric buttons</b>	Press to input channel numbers. Press the <b>ENTER</b> button to confirm.
<b>GOTO</b>	Press to switch between the last two viewed channels.
<b>REC</b>	Press to start recording the current TV program.
<b>TIME SHIFT</b>	Press to activate the time shift function.
<b>TIMER</b>	Press to edit scheduled recordings.
<b>EPG</b>	Press to activate the EPG menu if available.
<b>TELETEXT</b>	Press to activate the Teletext menu if available.
<b>SUBTITLE</b>	Press to activate the subtitle list menu if available.
<b>ZOOM</b>	Press to zoom out the image.

### 1. Program List Menu

Press the **ENTER** button when watching DVB-T TV programs, and the program list menu where you can see the program number and name will be displayed.



Press the **LEFT / RIGHT** button to select from TV and Radio. Press the **PREV / NEXT** button to page up /down. Press the **UP / DOWN** button to select channels, and press the **ENTER** button to confirm.

## 2 .Info Bar

While switching channels by the **UP / DOWN** button, an info bar will be displayed to show the channel information, or Press the **RETURN** button to display the info bar.



There're 4 strings displayed on the bar. Taking the info bar in the above photo for example:

**11+** – Stands for TV rating;

**N/A** – Stands for the voice language;

**SS** – Stands for subtitle;


**TT** – Stands for Teletext;

**SD** – Stands for resolution (SD - Standard Definition, HD - High Definition);

When the string looks concave, the option will be available.

### 3. Electronic Programming Guide

Press the **EPG** button when watching DVB-T TV programs, the Electronic Programming Guide will be displayed.

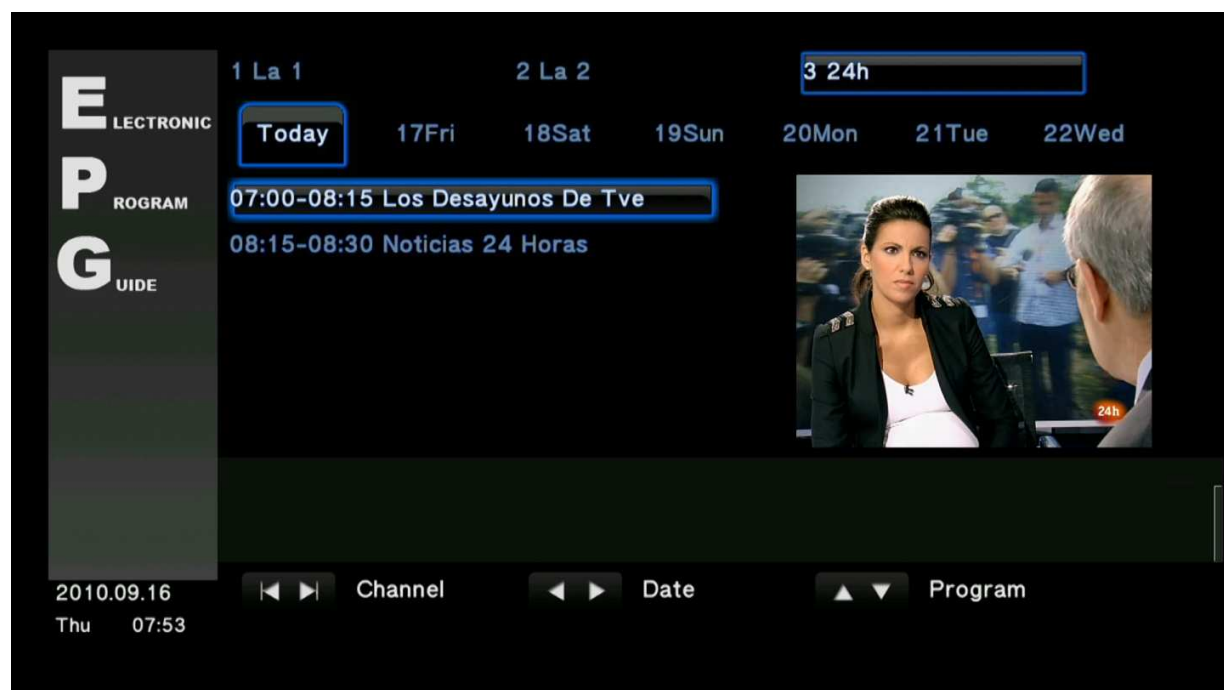

Press the **PREV / NEXT** button to change channels. Press the **LEFT / RIGHT** button to change date. Press the **UP / DOWN** button to change program. Press the **TIMER** button to add / delete scheduled recording.

#### 4. Teletext Menu

If the broadcasted stream supports Teletext, press the **TELETEXT** button to enter the Teletext menu.



Press the **Navigational** buttons to view the content in the Teletext menu.

#### 5. Subtitle List Menu

Press the **SUBTITLE** button when watching DVB-T TV programs, the Subtitle List menu will be displayed. Press the **LEFT / RIGHT** button to switch between Subtitle and TTX Subtitle List





Press the **UP / DOWN** button to select the subtitle, and press the **ENTER** button to confirm.

### 6.1.2 Watching Analog TV programs

To enter the TV mode, select the **Video in** icon on the main interface.

The following are some functional buttons on the remote control available during watching Analog TV programs.

Name	Function
<b>UP / DOWN</b>	Press to switch channels. (Channels cannot be switched in the recording mode.)
<b>PREV / NEXT</b>	
<b>Numeric</b> buttons	Press to input channel numbers. Press the <b>ENTER</b> button to confirm.
<b>REC</b>	Press to start recording the current TV program.
<b>TIME SHIFT</b>	Press to activate the time shift function.
<b>TIMER</b>	Press to edit scheduled recordings.
<b>ZOOM</b>	Press to zoom out the image.





---


## 7. Timer Record Menu


The **Timer Record** menu allows you to create, edit and delete recording schedules and view all schedule status and history. To enter the menu, select **Timer Record** from the **Guide** menu .





### 7.1 Creating a New Schedule

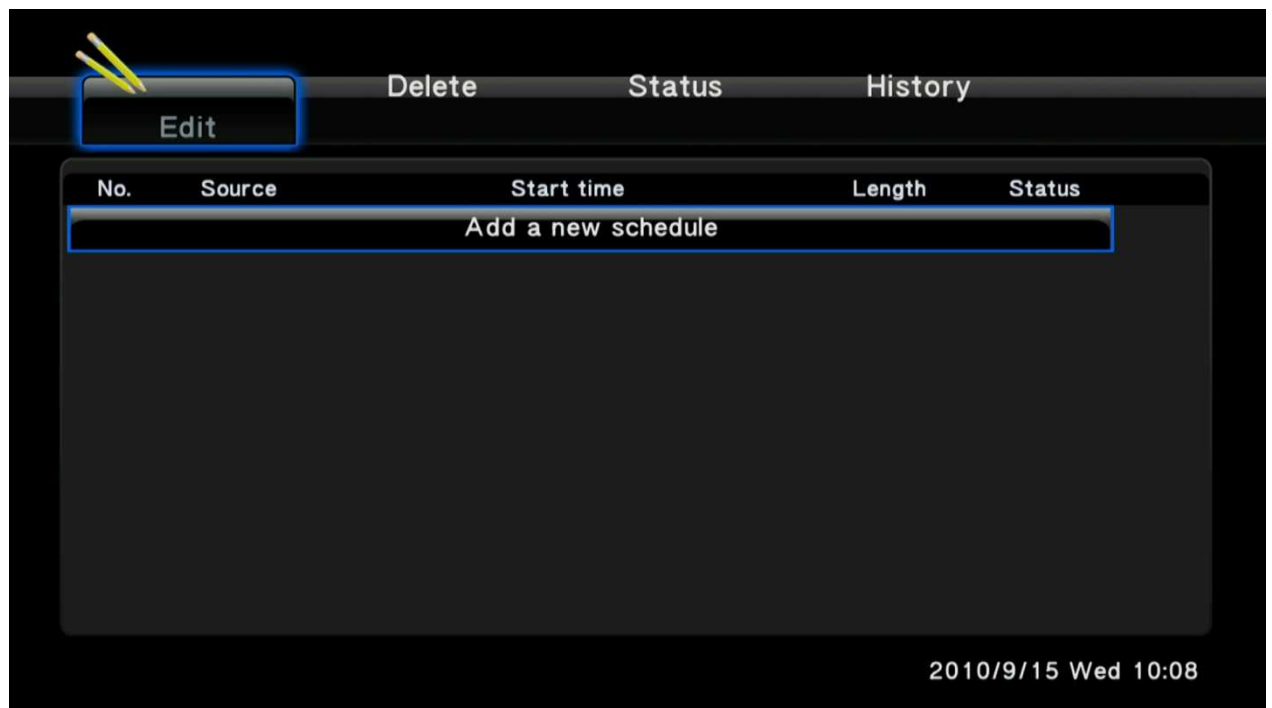Press  and  on the remote control to select the **Edit** tab from the menu bar.

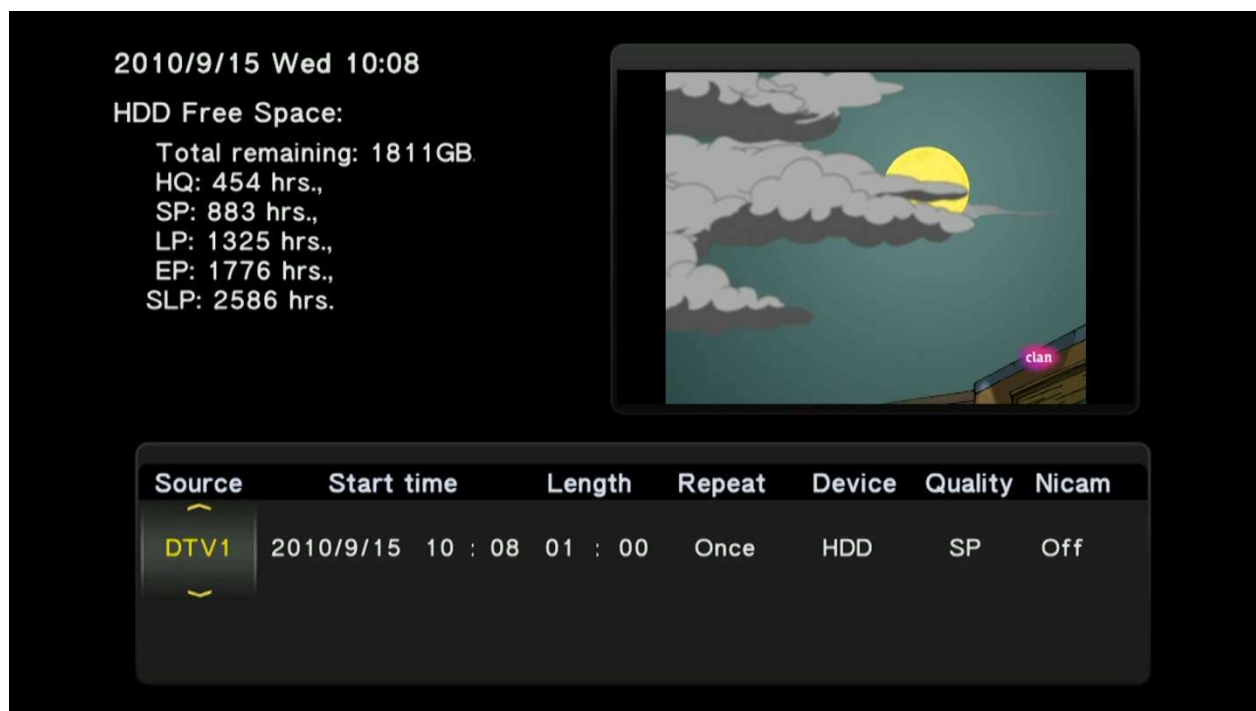Select **Add a New Schedule** and press  . The schedule setting screen appears.









Use  and  on the remote control to move between fields and Press   
and  to adjust each setting.

<b>Source</b>	Select the signal source from Video, DTV and Analog TV.
<b>Start Time</b>	Enter the date and time of the recording.
<b>Length</b>	Enter the length of the recording
<b>Repeat</b>	Select how often you want the schedule to record. Choose from Once, Everyday, Mon-Fri, Mon-Sat or for an individual day of the week.
<b>Quality</b>	Select the recording quality. Choose from HQ, SLP, EP, LP and SP. The higher the quality, the more space required on the hard drive. See <b>HDD/USB Free Space</b> on the left of the screen for details of how long you can record for using each setting.
<b>Nicam</b>	Nicam On or Off.



## 7.2 Editing Schedules

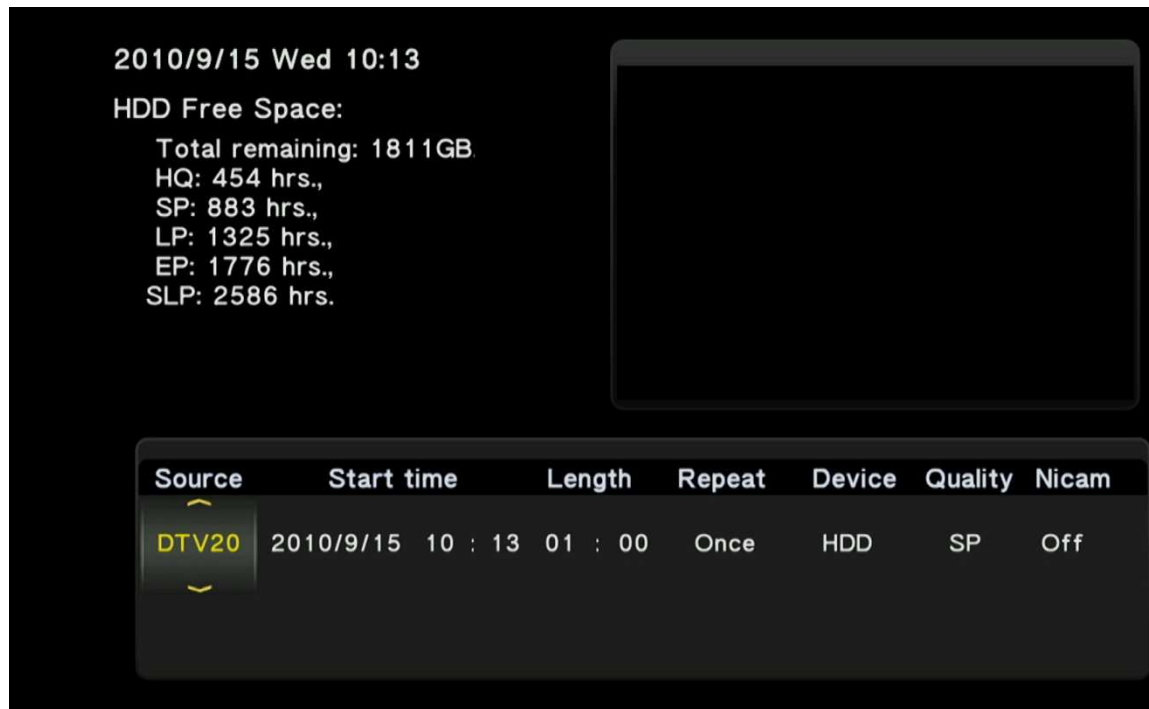
Press  and  on the remote control to select the **Edit** tab from the menu bar.




Select the schedule you want to edit from the list and press . The schedule setting screen appears. Modify the schedule as described in **“Creating a New Schedule” on page 43.**


## 7.3 Deleting Schedules

Press  and  on the remote control to select the **Delete** tab from the menu bar.



Select the schedule you want to delete and press . A confirmation message appears.

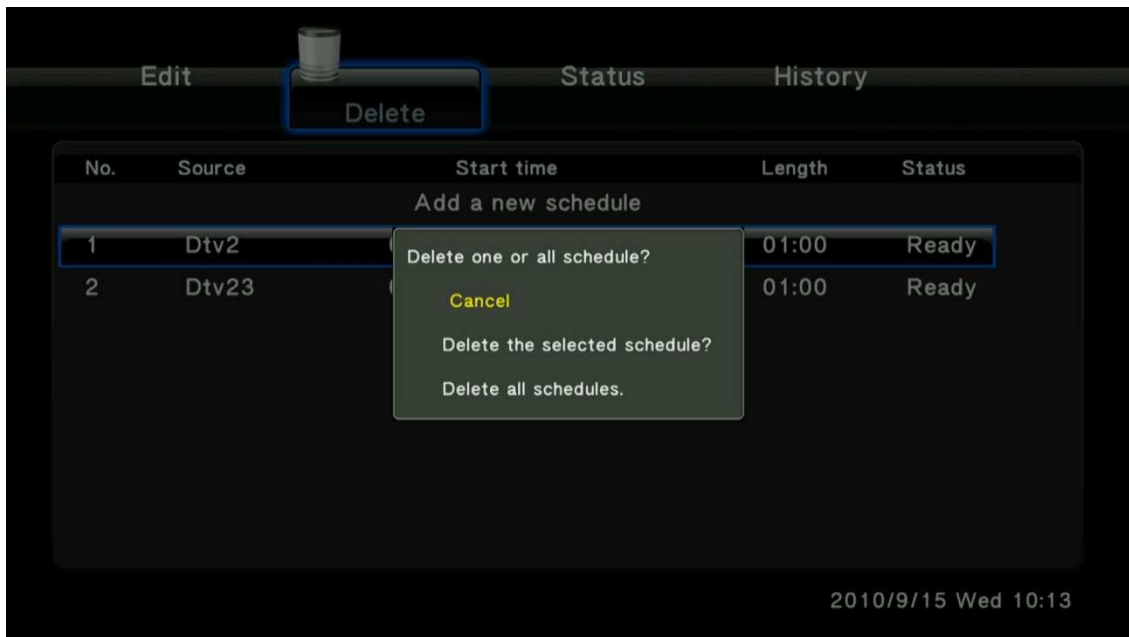




Select **CANCEL**, **Delete the selected schedule** or **Delete all schedules**. Press  to confirm.

## 7.4 Viewing Schedule Status

Press  and  on the remote control to select the **Schedule** tab from the menu bar.

The schedule list is displayed. Select a schedule and press .

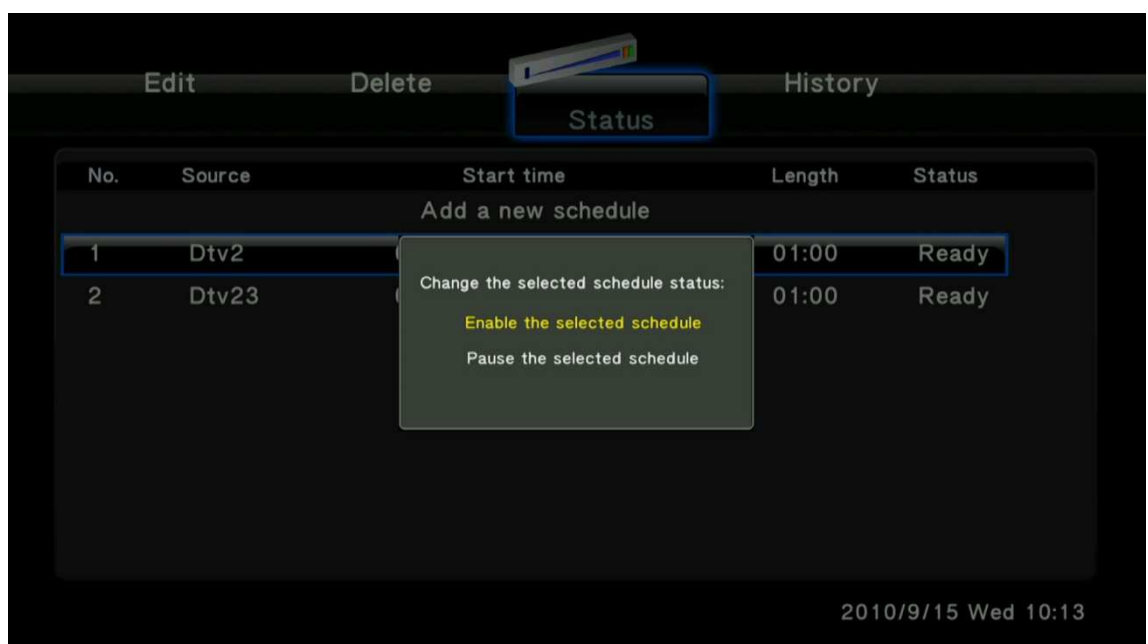



Select **Disable the timer by user's setting** or **Pause the selected schedule**.

Press  to confirm.

## 7.5 Viewing Recording History


Press the left and right navigation arrows on the remote control to select the **History** tab from the menu bar.


Here you can view a complete history of all recordings that were set.

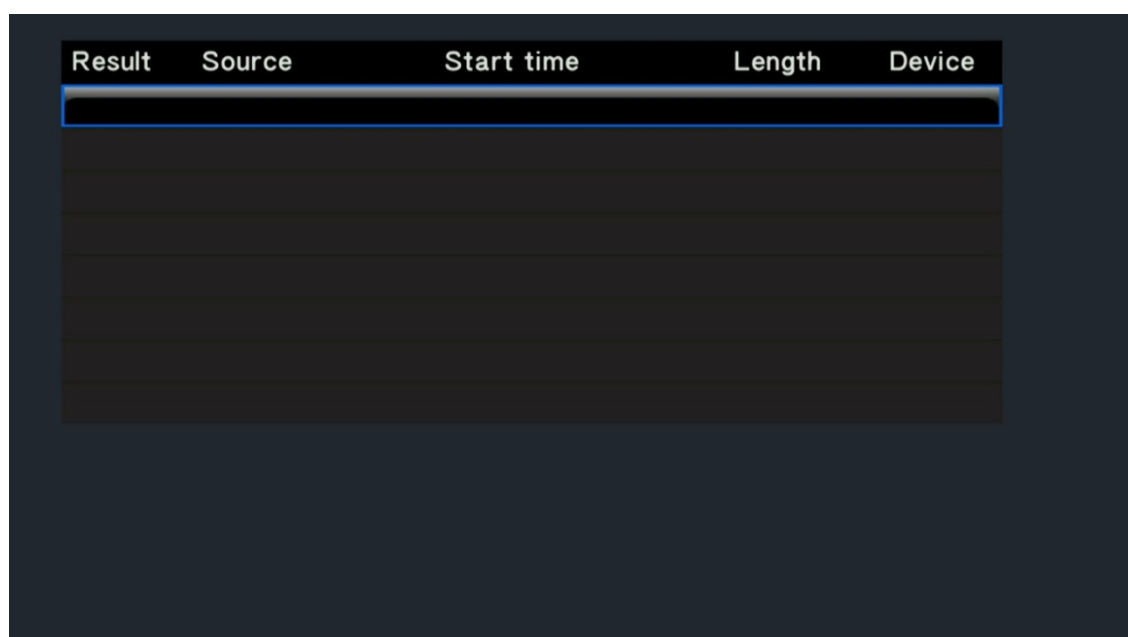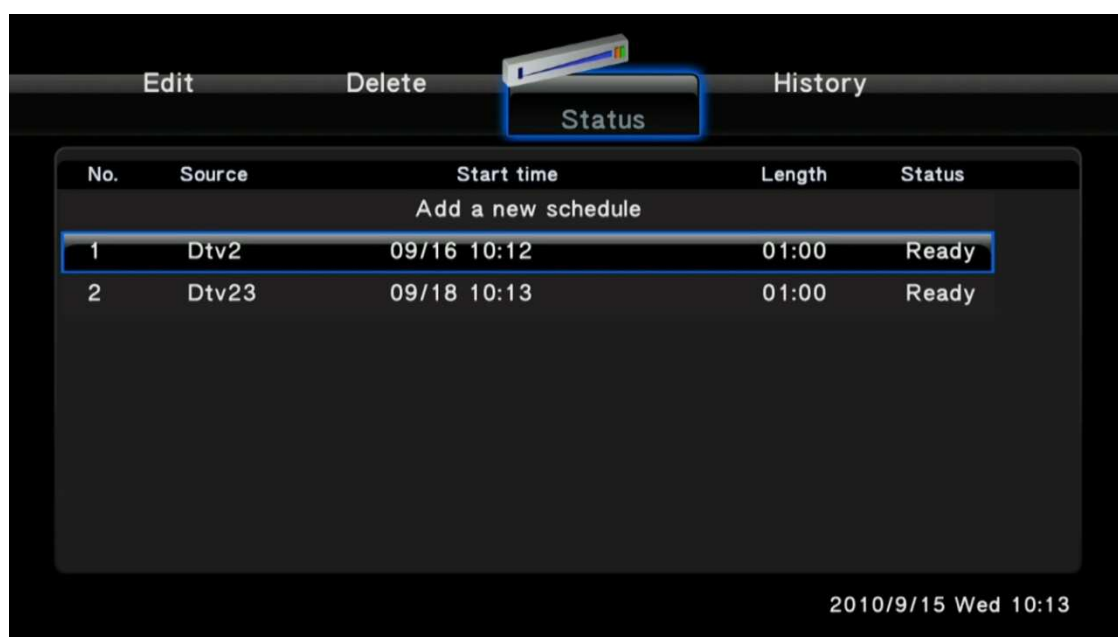

## 7.6 The REC List

The **REC List** menu allows you to play all saved titles.

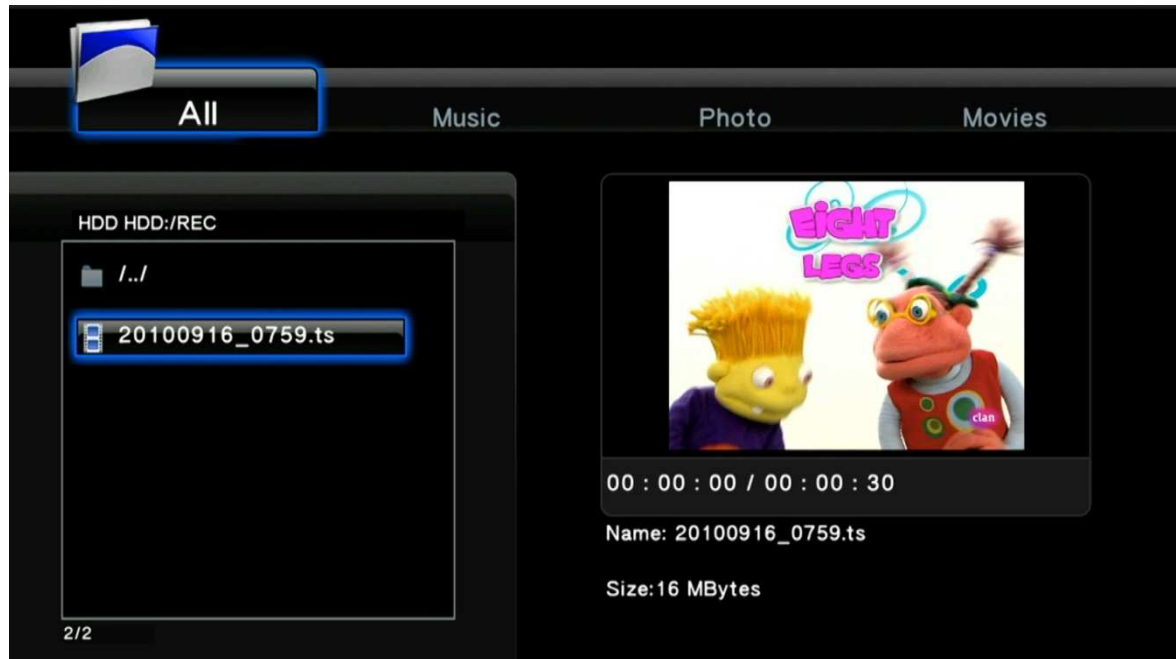


When you press  to begin recode. System will make a “My Recordings” folder at “HDD1” or USB device automatically for the first time. And your recode movie file will be saved at this folder. The file name will be rename according system time.

## 8. Web Server & BitTorrent

### 8.1 Web Server (unicgi)

A Web server called ‘Neighbor Web’ has been integrated into the player.


- Connect the player to your home network (LAN or WLAN).
  - Get the IP address of the player under **SETUP** -> **NETWORK** menu.
  - Type the IP address (e.g., 192.168.3.15) in the address bar of Internet Explore on your PC.
- Then you can access the Web server on your PC.

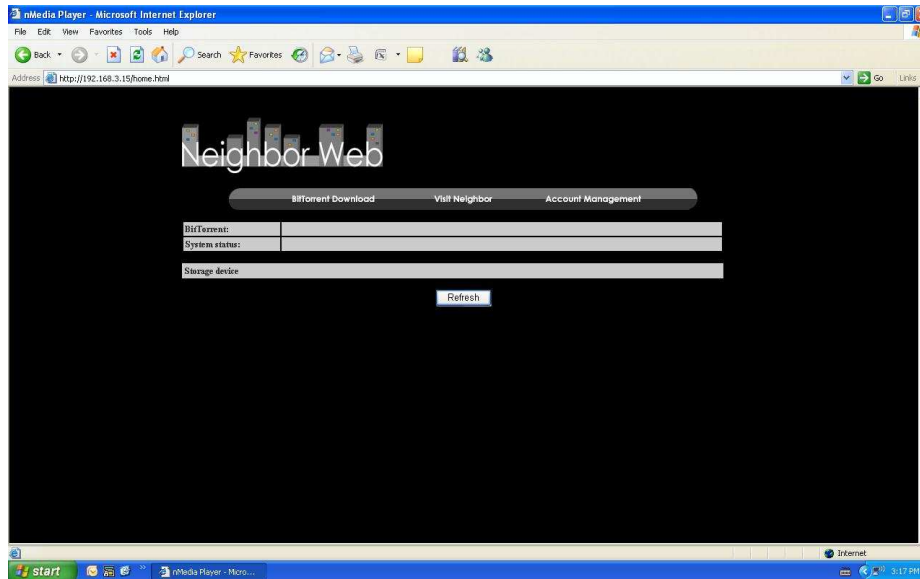

**Note:** Please refer to **Extension Info** in chapter '**3.6 Changing System Settings**', and make sure all related packages 'btcpd', 'samba', and 'unicgi' are installed and run properly in advance.

## 8.2 Account Management

- Click **Account Management** on the home page of Neighbor Web.

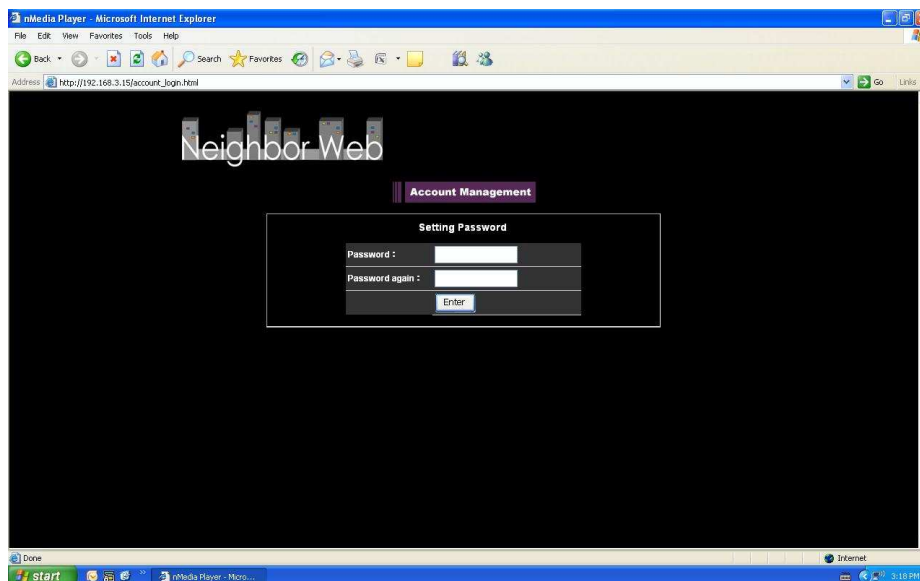

- This page allows you to set a password for accessing Neighbor Web.

**Note:**

- Password will become effective when Login Control is turned on. (Please refer to **Login Control** in chapter '**3.4 Changing System Settings**' for more details)
- The default user name is 'admin', and the default password is '123'.

## 8.3 Visit Neighbor (samba)


- Click **Visit Neighbor** on the home page of Neighbor Web.
- Then you will be able to browse, edit, and copy files to / from the local HDD of the player.

## 8.4 BitTorrent Download (btpd)

BitTorrent is a peer-to-peer file sharing protocol used for distributing large amounts of data on the Internet. A BitTorrent utility (btpd – BitTorrent Protocol Daemon) has been integrated into the player (Please refer to **Extension Info** in chapter '**3.4 Changing System Settings**' for more details about installing and uninstalling btpd).


The BitTorrent client btpd is running in daemon (a process running in the background) mode and you can manipulate the process via the Web server.

- Click **BitTorrent Download** on the home page of Neighbor Web, then you will enter the BitTorrent Download page.

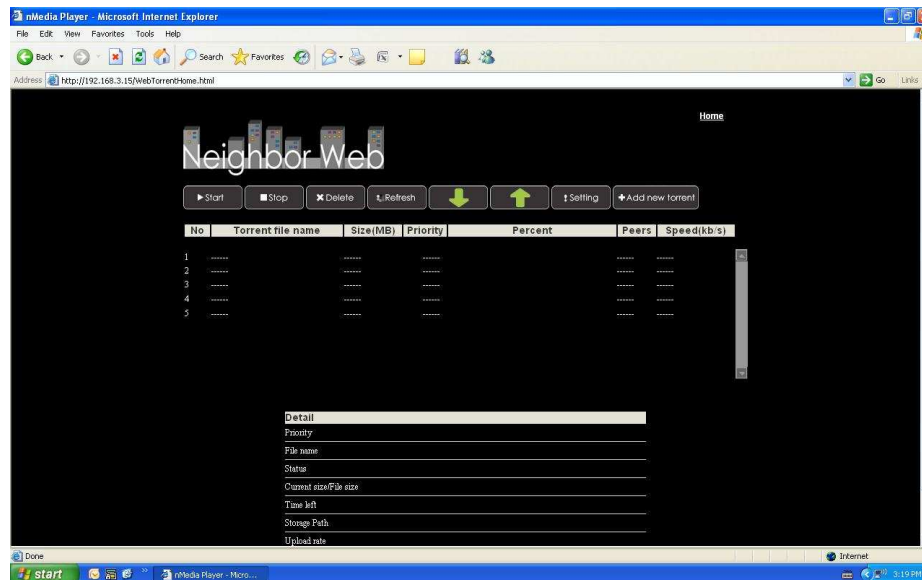

## 8.4.1 Add new torrent


- Click **Add new torrent** on the BitTorrent Download page.

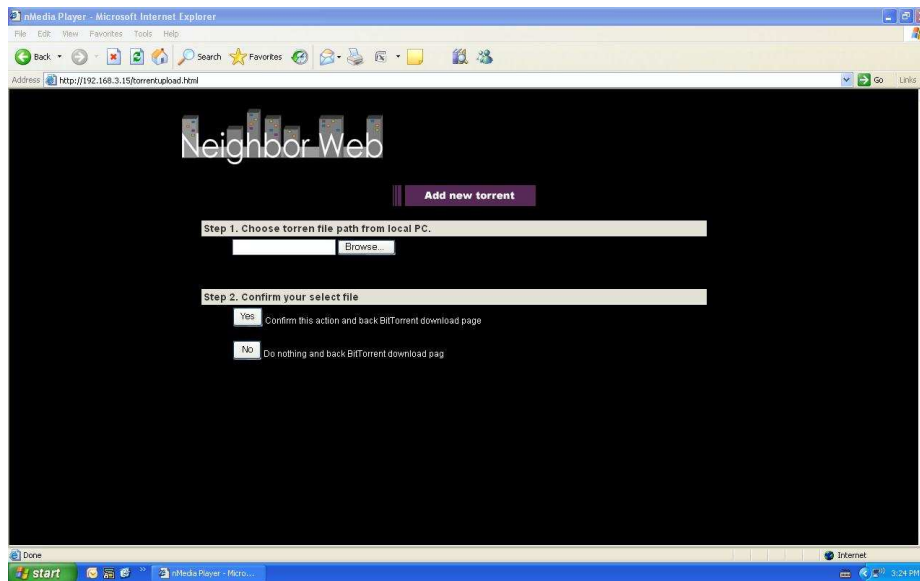

- Click **Browse** to upload a torrent file, and click **Yes** to confirm.

## 8.4.2 Managing the downloads


The BitTorrent Download page also allows you to start, stop, delete torrents, and set priorities for torrents, as well as view the status of current torrents.

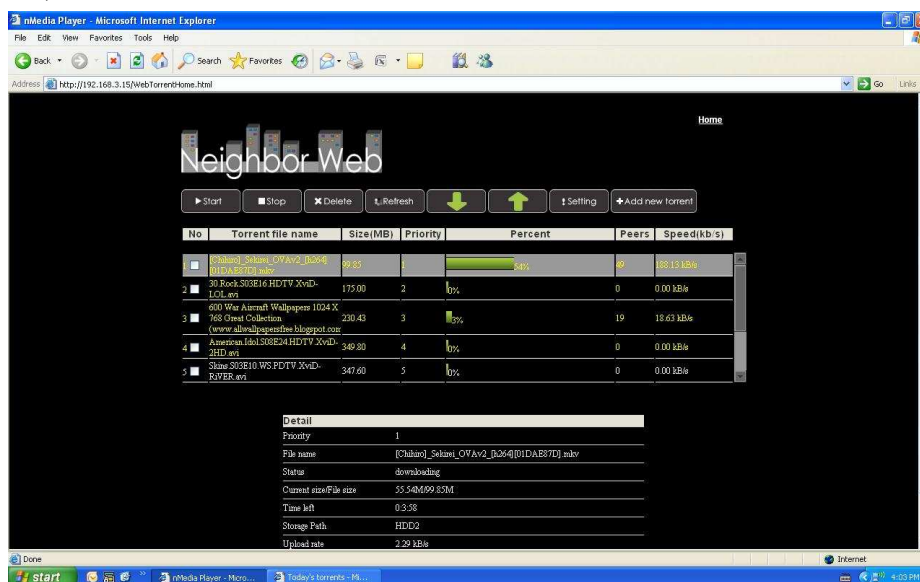

- Click **Start** to begin download.
- Click **Stop** to stop download.
- Click **Delete** to delete the selected torrent.
- Click **Refresh** to refresh the current status.
- Click **Down** arrow to decrease the priority for the selected torrent.
- Click **Up** arrow to increase the priority for the selected torrent.

### 8.4.3 Settings

- Click **Setting** on the BitTorrent Download page to enter the BitTorrent Setting page.

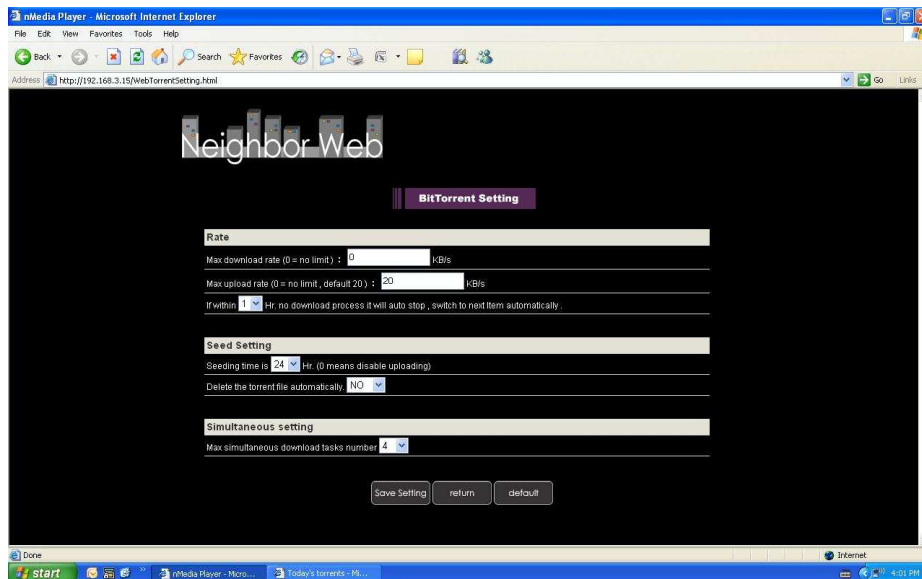

In the BitTorrent Setting page, you can configure the following settings.

- Set the maximum download rate.
- Set the maximum upload rate.
- Set the idle hours to start the next download automatically.
- Set the seeding hours.
- Set to delete the finished torrent files automatically or not.
- Set the maximum number of simultaneous download tasks.

## 9. Upgrading the Firmware

The firmware is the operating system (OS) installed on the device. Firmware upgrades can bring new features, improvements and bug fixes.

Please refer to **System Update** and **Extension Info** in chapter '**3.6 Changing System Settings**' for more details.

# 10. Appendixes

## 10.1 Specifications

---

### I/O INTERFACES SUPPORTED:

- 3.5" SATA HDD
  - USB 2.0 HOST port x 2 (compatible to USB 1.1)
  - Memory Card slot (supports SD/MMC/MS Pro)
  - USB 2.0 DEVICE port (connecting to PC)
  - Composite (CVBS) A/V jack
  - Component Y/Pb/Pr jack
  - HDMI V1.3 interface
  - S/PDIF coaxial & optical jack
  - DC-IN 12V
- 

### FILE SYSTEM SUPPORTED:

- FAT/FAT32/NTFS/EXT3
- 

### CONTENT FORMATS SUPPORTED:

- AVI/MKV/TS/TP/TRP/M2TS/MPG/MP4/MOV/M4V/VOB/ISO/IFO/DAT/WMV/ASF/RM /

RMVB/FLV, resolution up to 720p/1080i/1080p

- MP3/OGG/WMA/WAV/AAC/FLAC
  - HD JPEG/BMP/GIF/TIF/PNG
- 

### VIDEO CODECS SUPPORTED:

- MPEG-1
  - HD MPEG-2
  - HD MPEG-4 SP/ASP/AVC (H.264)
  - WMV9 (VC-1)
  - RealNetworks (RM/RMVB) 8/9/10, up to 720p
- 

### AUDIO CODECS SUPPORTED:

- MP2/3, OGG Vorbis, WMA (DRM, and Advanced Profile not supported), PCM, LPCM, MS-ADPCM, LC-AAC, HE-AAC, COOK, RA-Lossless
- 

### SUBTITLE FORMATS SUPPORTED:

- SRT, SMI, SSA, ASS, IDX/SUB, SUB
- 

### NETWORK FEATURE

- 10/100Mbps Auto-Negotiation Ethernet
  - 802.11b/g/n WLAN, up to 300Mbps (supported by optional WLAN USB Adapter)
-



Record Format (AV in)	
Video/DVB-T Rec.	Recorded Format: MPG DVB-T Record format: TS Resolution:720x576@25fps(PAL),720x480@30fps(NTSC) In AV in model:5 adjustable quality level: HQ/SP/LP/EP/SLP Support TV system: NTSC/PAL/SECAM
Audio Rec.	MP3(.mp3) 2 Channel: 16KHz,32Kbps24KHz,64Kbps32JHz,96Kbps

Hardware	
Video Input	CVBS
Video Output interface	HDMI, CVBS, Y/Pb/Pr(up to 720p/1080i)
Audio Output interface	Analog Stereo (L/R), S/PDIF, COAXIAL
USB 2.0 plug	1. USB Device*1 2. USB Host*2
Ethernet	Wired: 10M/100M
	Wireless: WI-FI(Optional)
<b>DVB-T tunner</b>	1. support digital MPEG4 ,H.264 DVB-T signal. 2. support 6MHZ, 7MHZ, 8MHZ channel DVB-T signal. 3. support Electronic Program Guide function (EPG) 4. Support TV program TTX function.
Card Reader	SD/MMC/MS
Storage format	Build-in 3.5"SATA HDD hard disk, 20G-1.5T. FAT32 AND NTFS ,EXT3 partial Support external SD/MMC/MS card Support USB Storage
Voltage	power adapter: input:100~240V AC 50/60HZ, output:12V/3A
Dimension	190(H)*173(D)*65mm(W)
Language	English, Traditional Chinese, Japanese, Spanish, French, German, Korean, Dutch, Russian, Simple Chinese...

**Description for details:**

AVI	NTSC	PAL	G/Hour
HQ	4.945Mbps,720*480,30fps	4.945Mbps,720*576,25fps	2G
SP	3.428Mbps,720*480,30fps	3.428Mbps,720*576,25fps	1.5G
LP	2.528Mbps,720*480,30fps	2.528Mbps,720*576,25fps	1G
EP	1.691Mbps,352*240,30fps	1.691Mbps,352*288,25fps	0.7G
SLP	1.268Mbps,352*240,30fps	1.268Mbps,352*288,25fps	0.5G

**VIDEO RECORDING MODE**

**Mode    DVD        80 GB HDD    120 GB HDD    160 GBHDD**

HQ	1hr	16hrs	24hrs	33hrs
SP	2hrs	32hrs	48hrs	66hrs
LP	3hrs	48hrs	72hrs	99hrs
EP	4hrs	64hrs	96hrs	132hrs
SLP	6hrs	96hrs	144hrs	198hrs

**Note:** The specifications and design of this product are subject to change without notice.

## 10.2 Frequently Asked Questions

**Question 1:** *When I try to disconnect the USB device, I keep on getting “The device ‘Generic volume’ cannot be stopped right now. Try stopping the device again later.” message, what should I do?*

**Answer:**

Close any program that might be accessing data on the player, including Windows® Explorer. If it does not work, close all programs and wait for another 20 seconds, then try the green arrow icon again. If it still does not work, you should shut down the player and disconnect the USB cable.

**Question 2:**

*I find new file names and folder names that I never created before or they have strange gibberish names.*

**Answer:**

Most likely, the player's file allocation table (FAT) has been corrupted. This might be due to the player shutting down (due to low battery power) while reading or writing to your computer by the USB connection. Windows and Macintosh often write extra files to the hard disk such as finder.def or System volume info. These are normal and will not do any harm to the player.

***Question 3: I used my player to transfer files back and forth between different computers. Will defragmenting the player hard disk do any harm to it?***

**Answer:**

Defragmenting the player hard disk may be useful after having transferred many files to and from the player. It is never harmful to use the defragment on the player. Make sure no other programs are running while using the Windows® defragment utility. Make sure you have connected the player with the external power adapter during this procedure.

***Question 4: My files have disappeared from the player.***

**Answer:**

Make sure that you browse your files via the correct browser mode which means correct filtered views such as Photos, Music, or Movies.

***Question 5: During power on, why does the TV will have a short flashing, blue screen or screensaver?***

**Answer:**

This is normal, when the system initializes, it will setup the corresponding parameters so it can output the correct video signal to the TV, during the initializing time, the TV will receive incorrect signals or the signals will not be stable and will cause the TV screen to flash, some TV's will treat this as no signal, and will display a blue screen or screensaver.

***Question 6: Why when I switch to Y/Pb/Pr 480p, 576p, 720p, 1080i, and 1080p, does the TV screen display an unwatchable picture?***

**Answer:**

Please check if your TV supports Y/Pb/Pr 480p, 576p, 720p, 1080i, and 1080p output, if your TV does not support, please use the A/V signal display instead, press the TV SYSTEM button on the remote control, then switch the TV's video input to NTSC or PAL.

***Question 7: Why is there no sound on movie or music playback when using Y/Pb/Pr component output?***

**Answer:**

Y/Pb/Pr output is a video output only, and does not include sound signals. When using Y/Pb/Pr output, please plug the A/V OUT or the S/PDIF jack to output sound.

***Question 8: I cannot get SSID name, the screen always displays: 'Can't get any SSID!'***

**Answer:**

When the WLAN USB Adapter is connected to the player, it needs some time to get initialized. Please wait for about 1~2 minutes and try refreshing the SSID list again.

**Question 9: I cannot see files shared on my computer via Browser->Network menu.**

**Answer:**

Please check following items:

- 1) Connect the player to network and obtain an IP address first;
- 2) Please enable NetBIOS of TCP/IP on computer;
- 3) Please check your PC's firewall settings;
- 4) Please enable your PC's 'Guest' account;
- 5) Please share the folders which you wish to browse on your PC, and make sure that 'Everyone' or 'Guest' has the right to access.

**Question 10: I configured everything correctly, but still cannot get the wireless network or UPnP function to work.**

**Answer:**

Are you using a firewall such as Norton Internet Security, McAfee Personal Firewall, Zone Alarm, etc. or even the built-in firewall of Windows XP? (Don't forget that Service Pack 2 for Windows XP automatically upgrades your firewall and turn it on by default)

If you have a firewall, it may need to be configured or have exceptions created to allow you to see and communicate with the player on the network. To test if your firewall is preventing network communication (including PING and access shared folders), try disabling it to see if you can connect. If you can connect with the firewall disabled, you may need to add the player to the 'Trusted' list or configure the firewall for local intranet access. Worst-case, disable your firewall long enough to use the player, then enable it again when done.

**Question 11: I am using the 802.11n Wi-Fi dongle with an 802.11n wireless router, why the speed is still 802.11g 54Mbps rather than 300Mbps?**

**Answer:**

The IEEE 802.11n Draft standard prohibits using high throughput with WEP or TKIP as the unicast cipher. If you use these encryption methods (e.g. WEP, WPA-TKIP), your data rate will drop to 54 Mbps. You may contact the Access Point or router manufacturer to download the latest firmware, or try other encryption methods (WPA2-AES or WPA2-TKIP), or choose to configure an unsecured profile, but this option is not recommended.

**Question 12: Where can I find .torrent files for BitTorrent download?**

**Answer:**

A lot of torrent sites can be found on the Internet, such as The Pirate Bay, Isohunt.com, TorrentPortal.com, Mininova.org, etc. Please take care of the contents you're downloading and their usage, which might cause copyright infringements and violate the local laws.

## 10.3 Copyrights and Trademarks

### Copyrights

**All rights reserved.** No part of this manual may be reproduced, or transmitted in any form or by any means, whether by electronically or mechanically, without the express written permission from the copyright holder.

Copyrighted materials, such as software, music files, or movies, are protected by local law, and may not be illegally copied or used without permission from the copyright owner.

### Trademarks

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other trademarks are property of their respective holders.

## 10.4 Warranty

### **What your warranty *does not* cover:**

- Acts of nature, such as fire, static discharge.
- Damage from unauthorized repair, alteration or accident.
- Damage from misuse or neglect.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Loss of customer's software, firmware, information, or memory data.
- Improper handling or installation.